


Overhang Carry Bar Kit

Part number	2HJ.071.126.
-------------	--------------

Amarok ⇨ 2022

We reserve the right to make changes to
the scope of delivery.

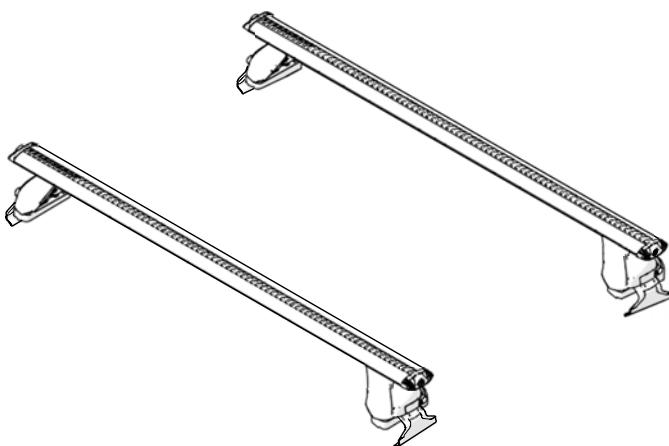

Distributed by: Volkswagen Zubehör GmbH,
An der Trift 67, 63303 Dreieich, Germany

UK: Distributed by Volkswagen Group United Kingdom Ltd.,
Yeomans Drive, Blakelands, Milton Keynes, MK14 5AN,
United Kingdom

Notes

Dear customer,

Congratulations on choosing this VW accessory. This manual contains important information, advice, introductions and warnings on fitting and using this component in your vehicle which must be strictly adhered to. Please also read and observe the information's and warnings kept in the vehicle manual. Volkswagen Zubehör work continuously to develop and further improve all products. This is why it is possible to alter any part of the scope of delivery equipment and technology at any time. The data provided concerning the scope of delivery appearance and functions of the product correspond to the information available at the time of its going to print

List of Content

issue	Page
Warnings	En – 2
Advises	En – 2
Maintenance	En – 2
Carrying capacity	En – 2
Kits required	En – 3
Scope of delivery	En – 3
Tools to be used	En – 3
Mount of scope of delivery	En – 4



Warnings

1. The assembly of this scope of delivery must be performed at a specialist workshop!
2. Only use undamaged tools to implement of all the work steps.
3. Occupational health and safety must be adhered to during the work!
4. Please refer to this fitting instruction to ensure the product is installed correctly.
5. Check the contents of the kit before commencing fitment and report any discrepancies.
6. Place these instructions in the vehicle's glove box after installation is complete.
7. These instructions must be followed for the warranty to be upheld.


! Advice

1. Distribute loads evenly and laterally and longitudinally as low as possible over the span of the rack
2. Avoid point loads concentrated in the center span of the racks
3. Exercise extreme care when transporting wind-resistant loads. Special consideration must be taken when cornering and braking
4. Off-road conditions can be much more rigorous. Extreme care must be taken on any off-road path.
5. Long flexible loads must attach securely to a rigid support and be tied to the bonnet.
6. Loads must be tied to the cross bars, not the roof rack legs
7. Use only non-stretch fastening ropes or straps to attach cargo to the roof.
8. Roof racks must be removed when going through an automatic car wash.
9. Canopies can move independently from the vehicle cabin. Rigidly fix to either the cabin roof racks **or** the canopy roof racks but not both simultaneously.

Maintenance Checks

1. All bolt connections should be checked after driving a short distance when you first install your roof racks.
2. All bolted connections should be checked again at regular intervals (weekly is recommended, depending on road conditions, usage, loads and distances travelled).
3. All bolted connections should be checked each time they are re-fitted.
4. Off-road conditions are more rigorous. Check all bolted connections and your load more regularly.
5. Ensure that your vehicle manufacturer's GVM, and gross axle weights are not exceeded (refer to vehicle owner's manual).

Carrying Capacity

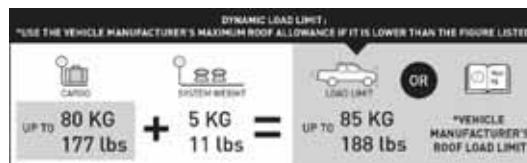

Kits Required


Item	Kit	Piece
01	Base Kit	1 piece
02	Leg Kit	1 piece
03	Bar Kit	2 pieces

Scope of delivery



Position	Component	Piece
01	Leg	4 pieces
02	Leg Covers	4 pieces
03	Key (Pair)	1 piece
04	Foot Plate	4 pieces
05	Torque Key	1 piece
06	Location Decals Sheet	1 piece
07	Positioning Decals Sheet	1 piece
08	Pad	4 pieces
09	Clamp	4 pieces
10	Crossbar	2 pieces

Tools to be used


- Scissors / Cutters
- Measuring Tape

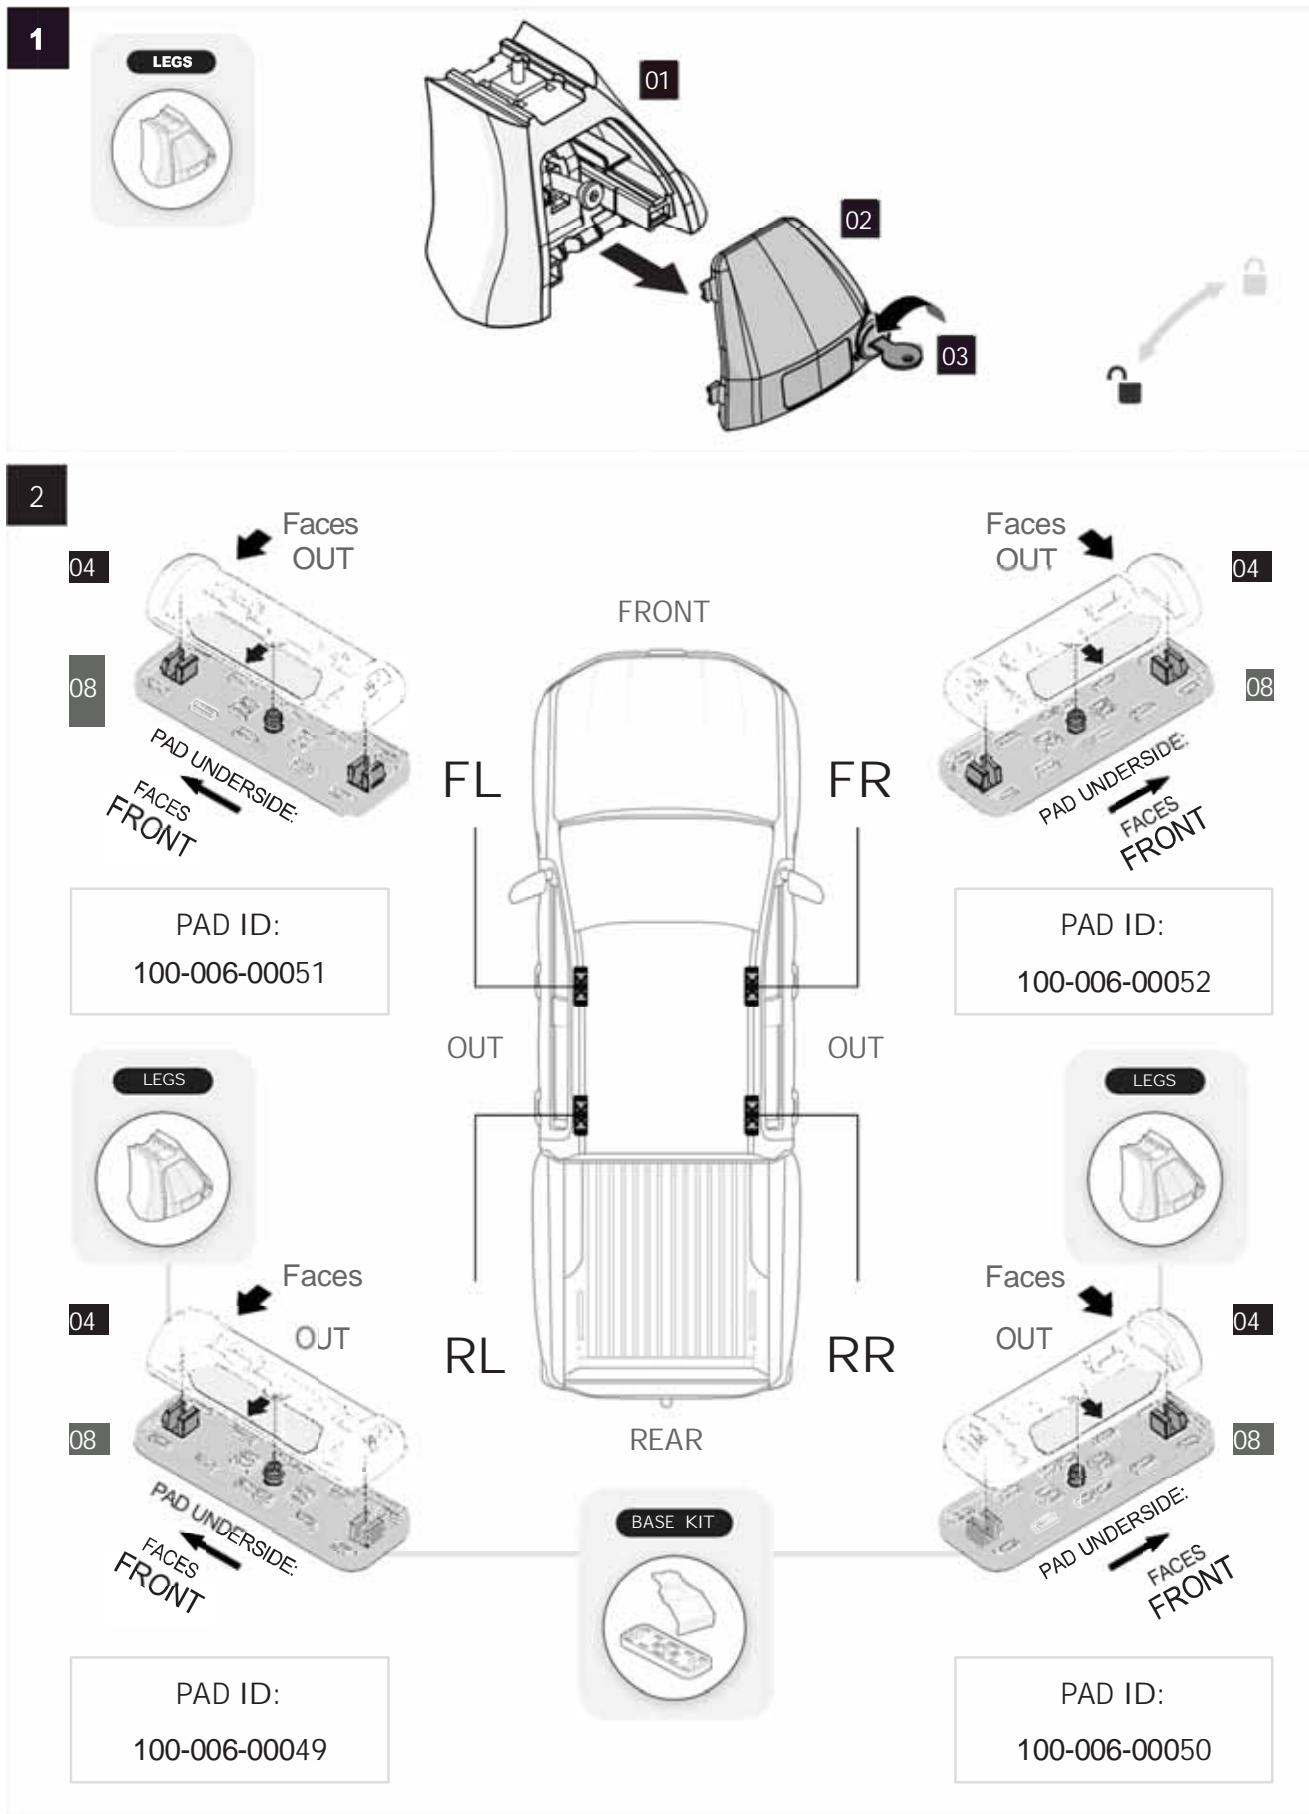

3

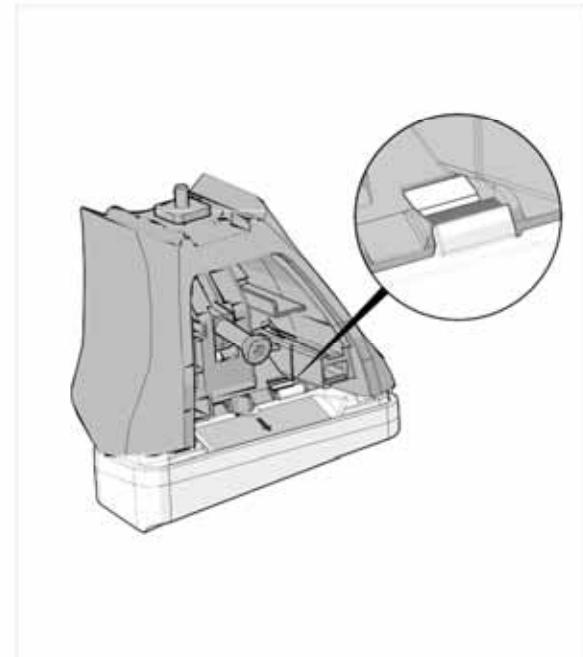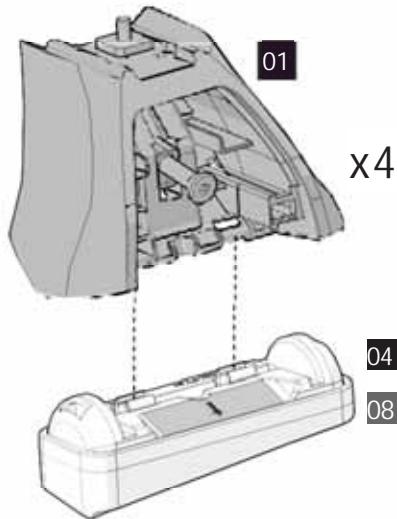

4

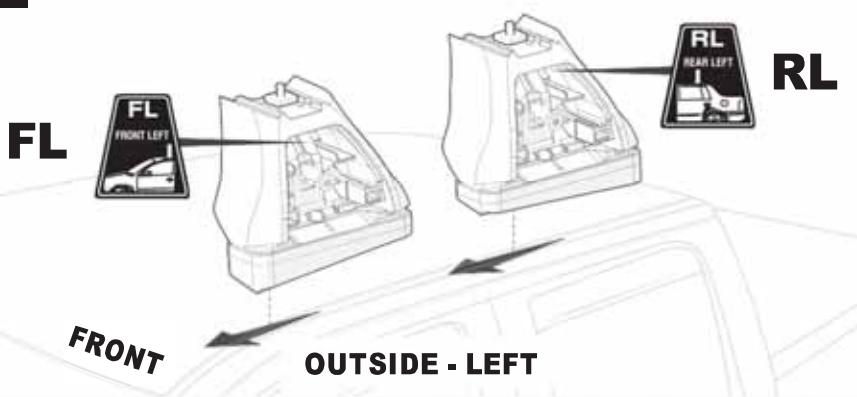


LEG LOCATION LABELS


06







Place labels inside the leg to help identify the leg's location on the vehicle roof when re-fitting crossbars.

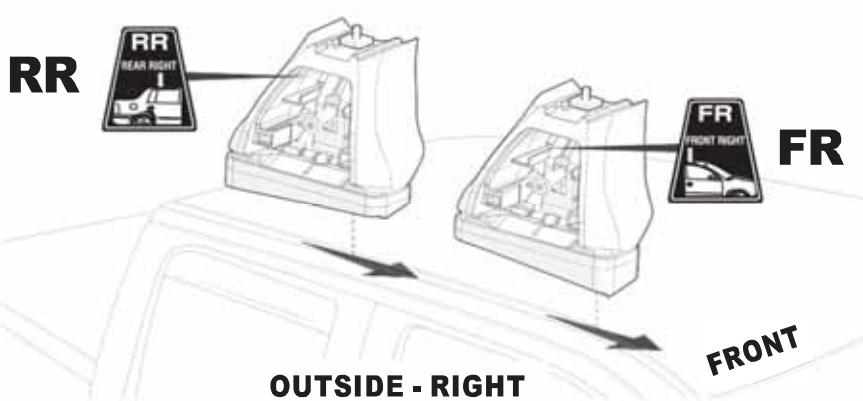


Place label

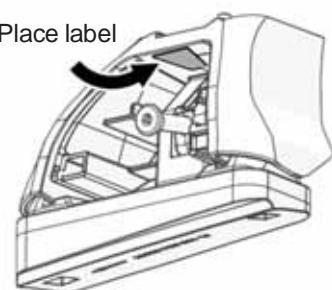


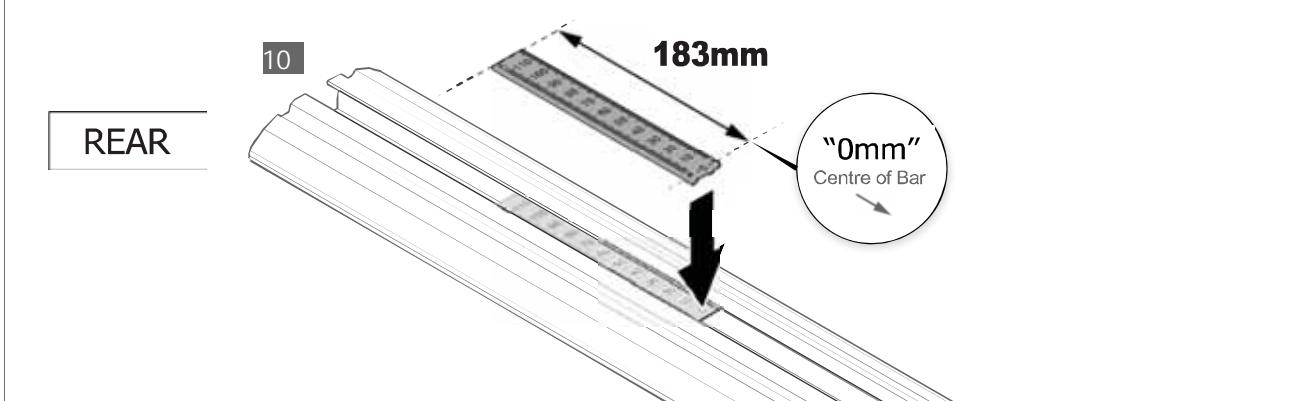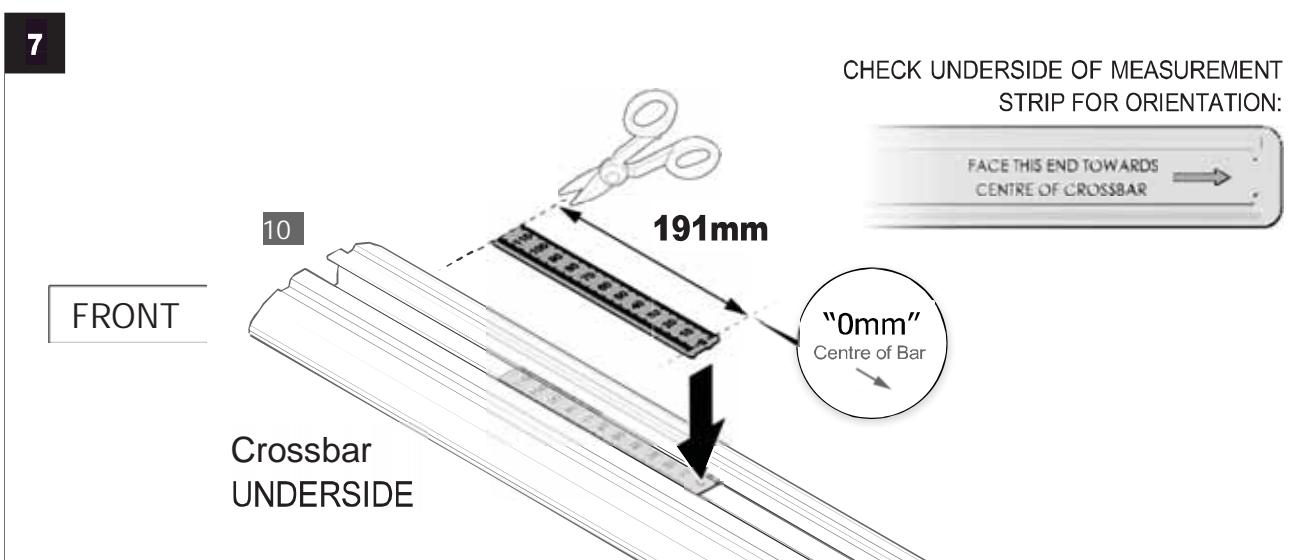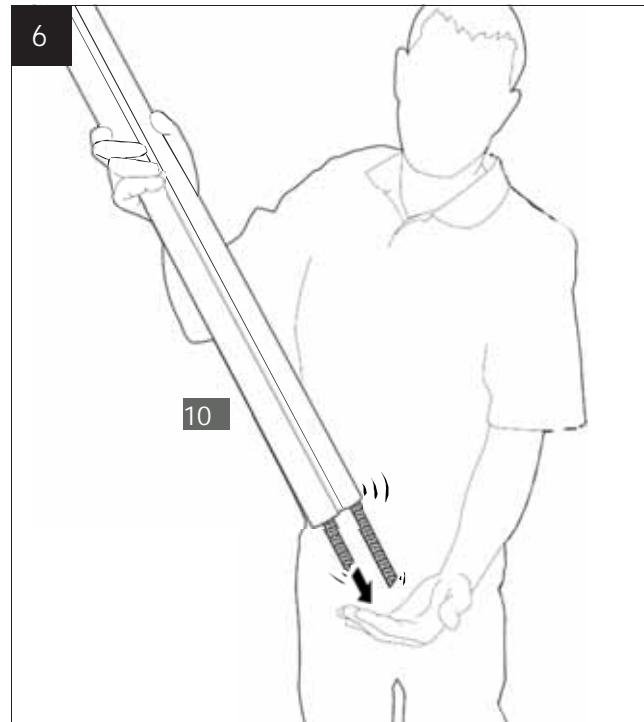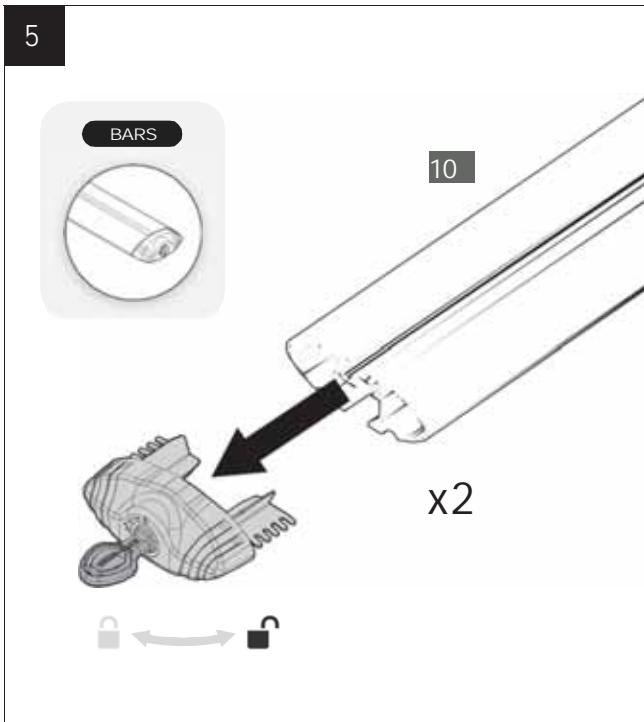

8


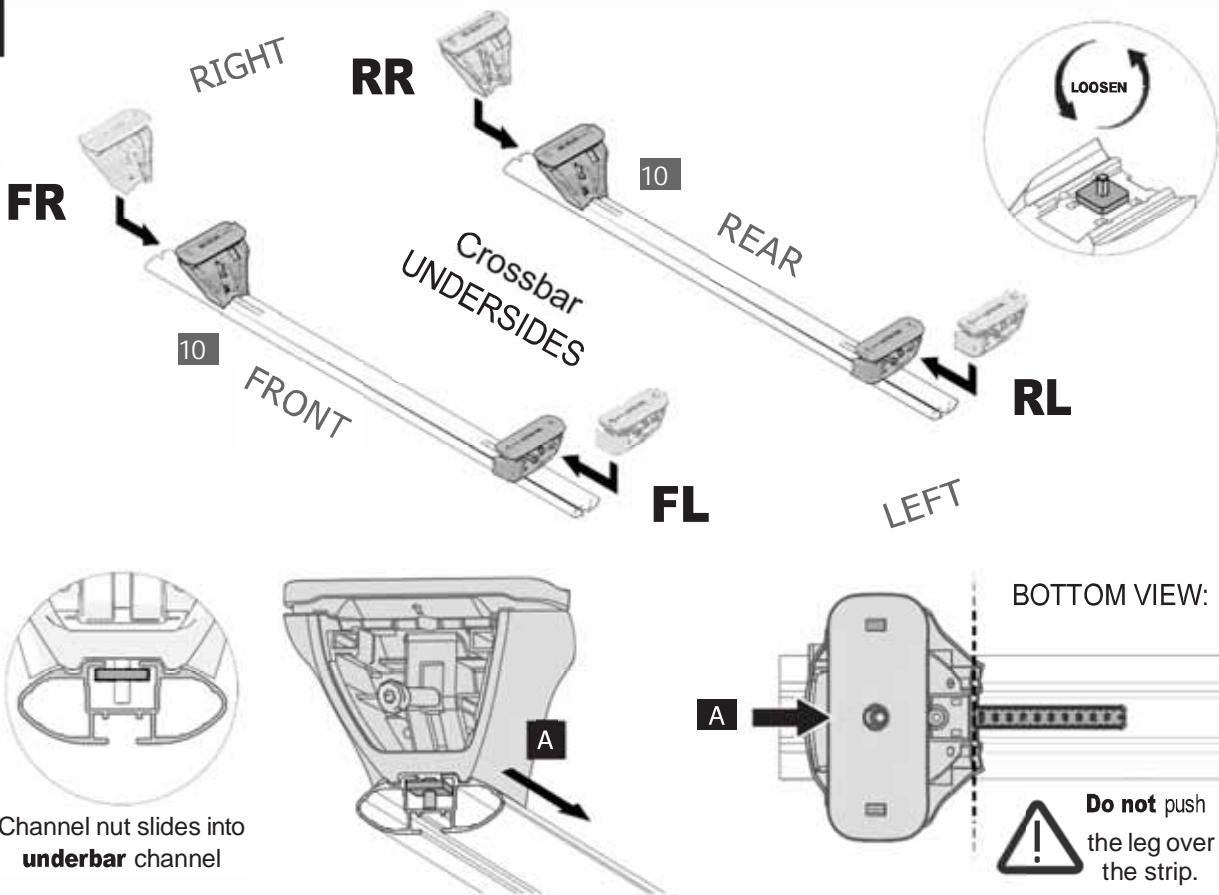






9

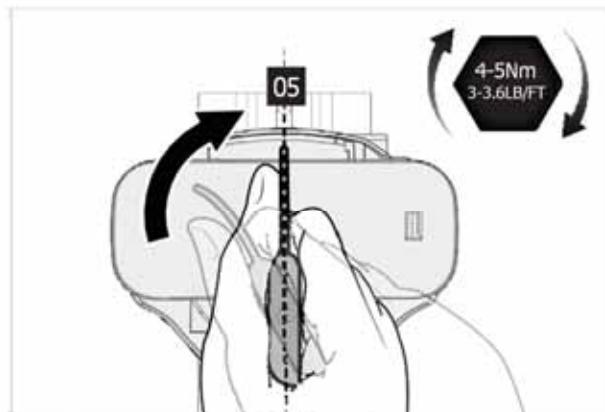

10

Repeat for all crossbar ends.

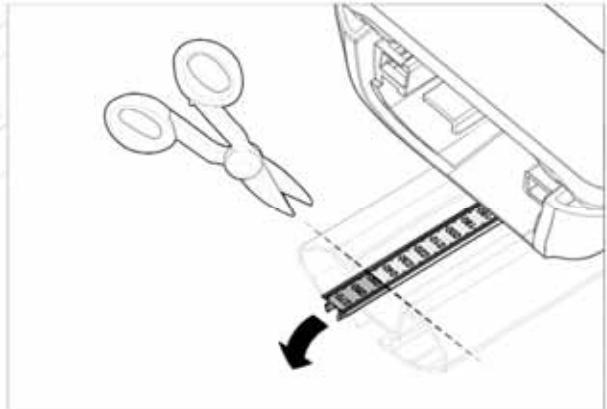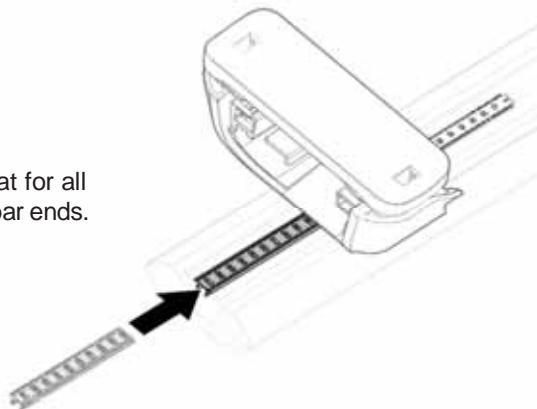

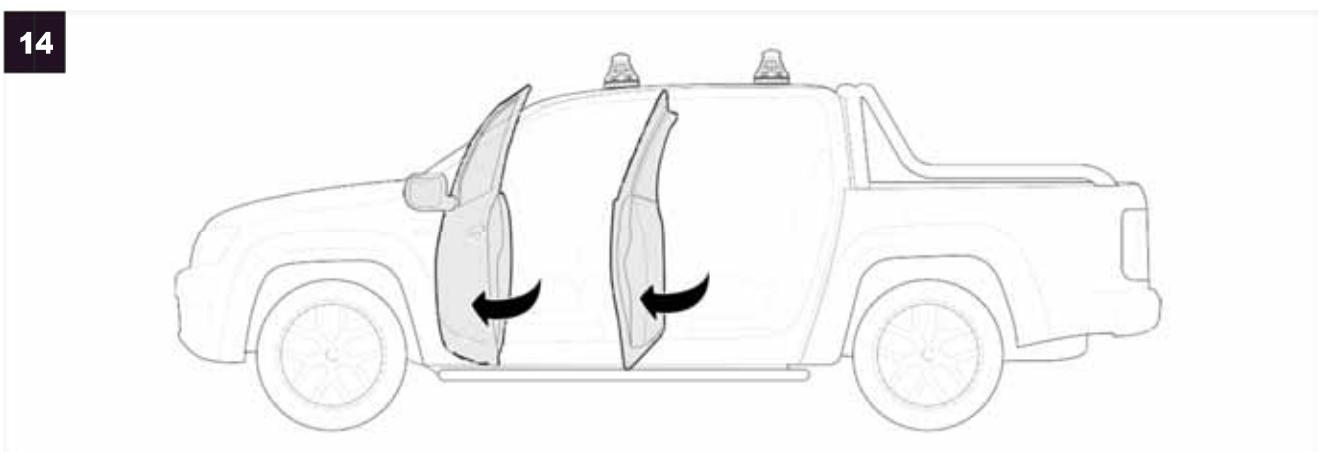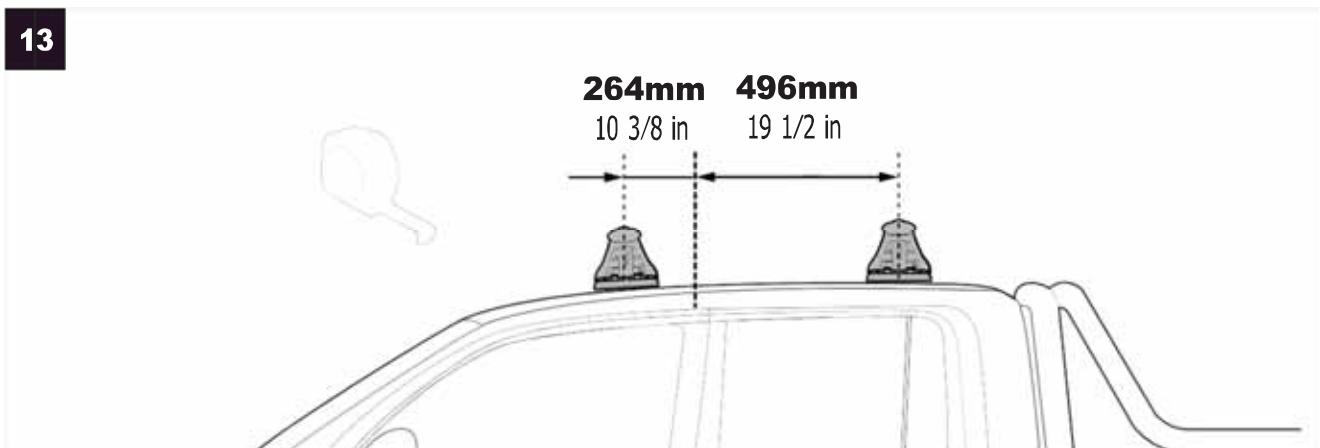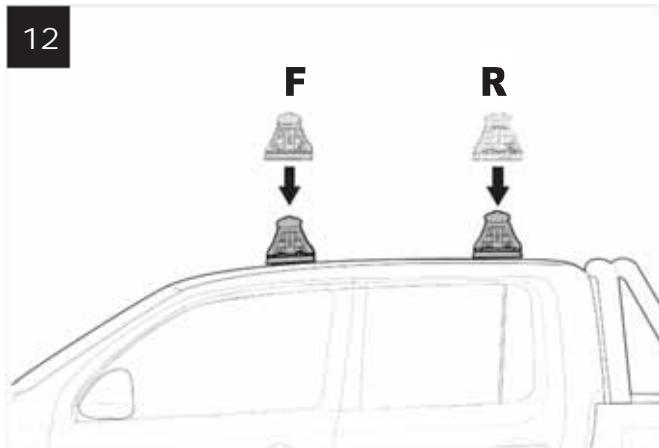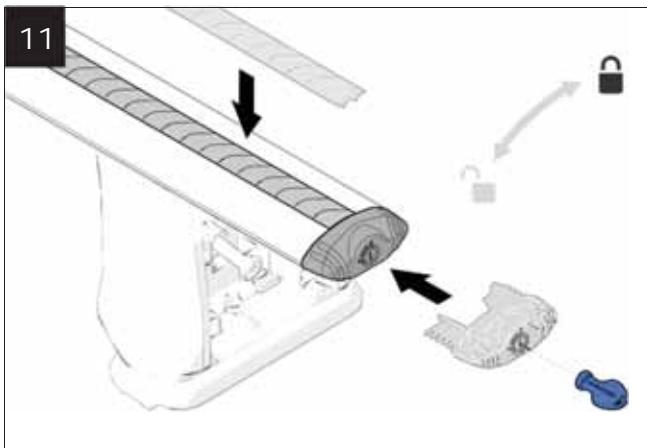


15 LEG POSITION DECALS



Adhere the arrow decals in line with foot plate arrows for future reference.

Note: When the door is shut, the sticker should not be visible. Place in door jamb accordingly.

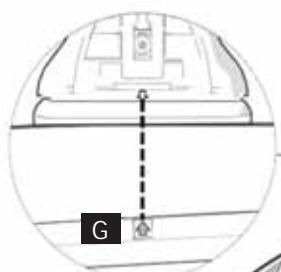


16

CLAMP ID:
100-001-00116


BASE KIT




CLAMP ID:
100-001-00117

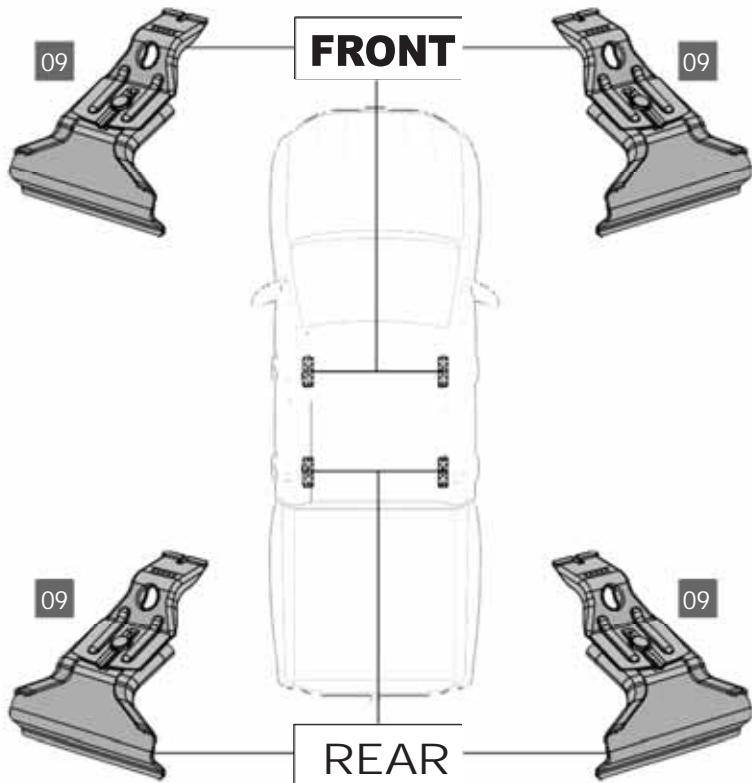

17

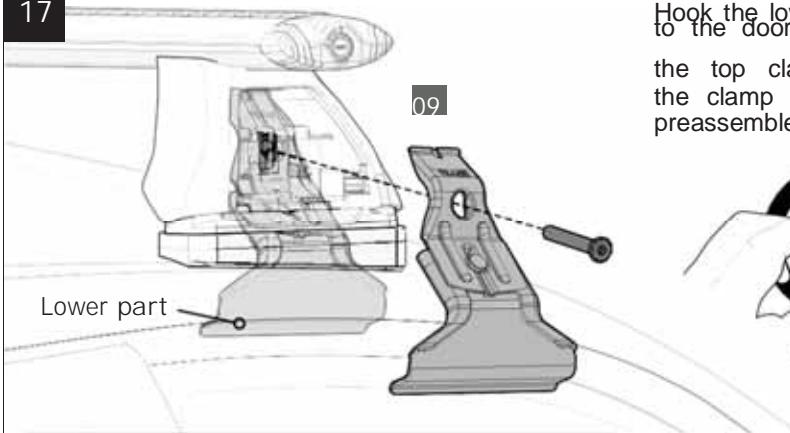


Hook the lower part of 09 to the door jamb, adjust the top clamp to align the clamp hole to the preassembled nut

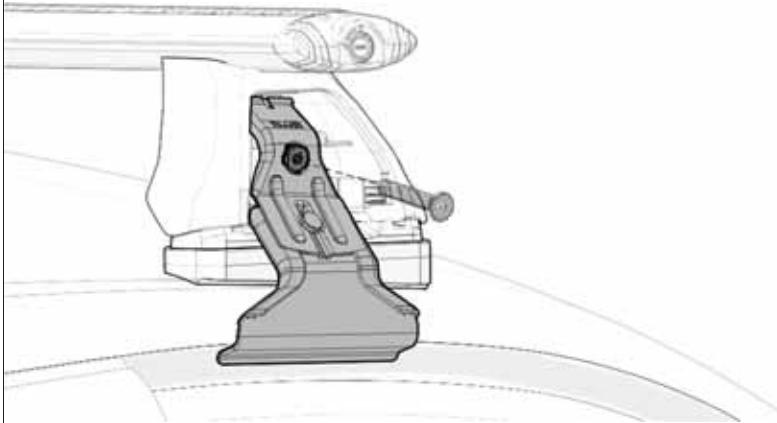



SIDE VIEW

The clamp must have full contact along its face.

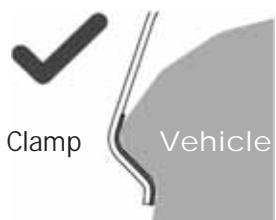

18 Visually inspect and ensure that the pads are correctly seated against the body of the vehicle.

FRONT VIEW

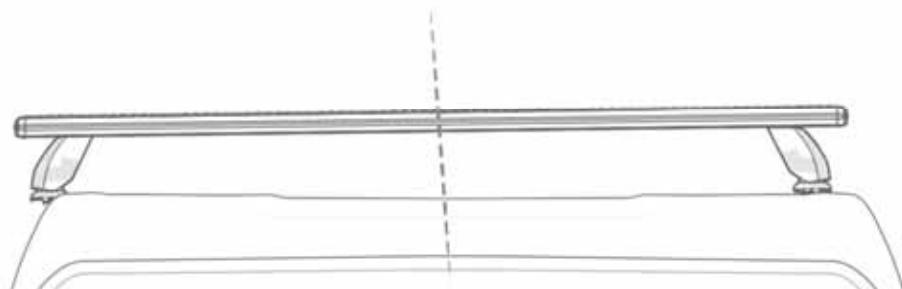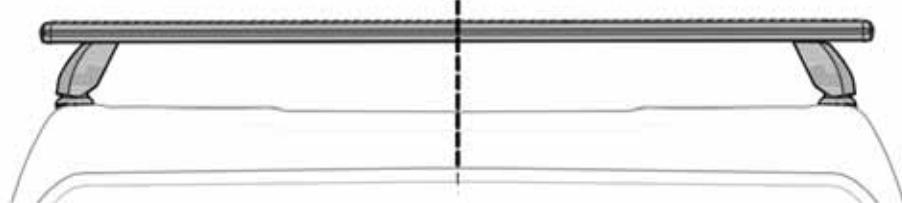

19



Tighten bolts incrementally and evenly on each side of the vehicle to avoid pulling the rack to one side.



Do not over tighten.



4-5Nm
3-3.6LB/FT

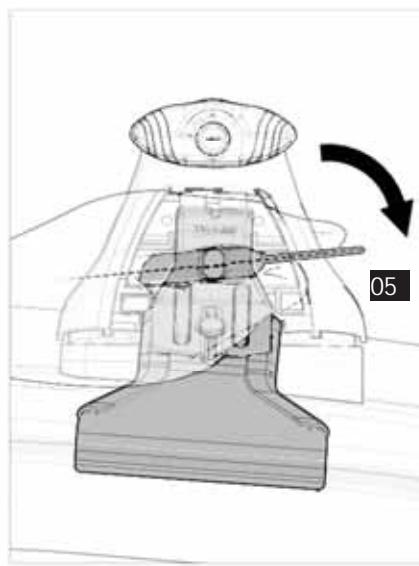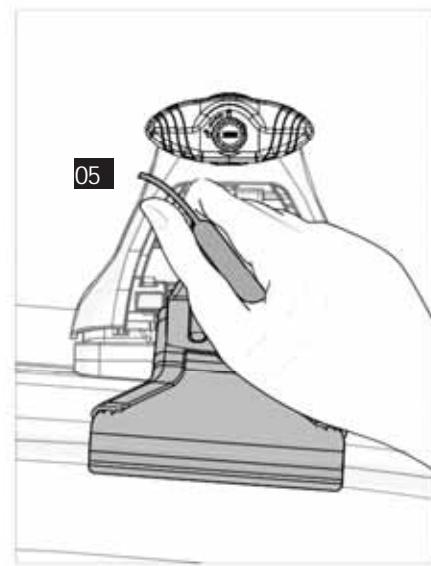

SIDE VIEW

The clamp must have full contact along its face.



Clamp





20

Check fitment is secure



21

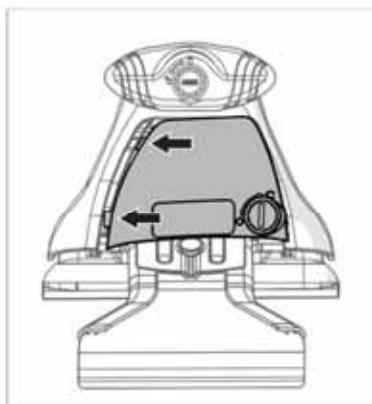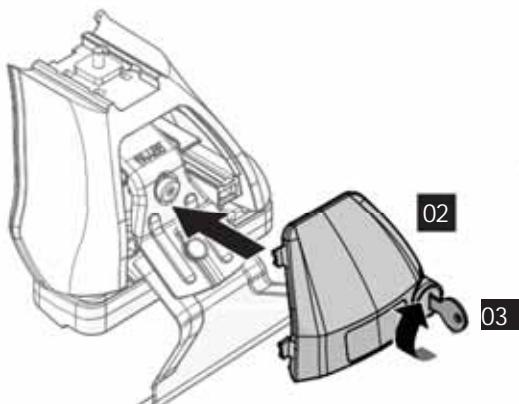**NOTE**

Cut and install vortex strips around the accessories if required.

