





Mountain Top® Roll

Installation manual




DOWNLOAD PDF

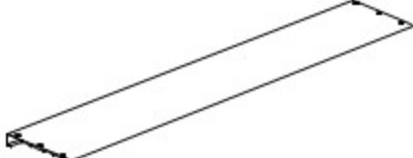Parts		
A  x 1	B  x 1	
C  x 1	D  x 1	E  x 1


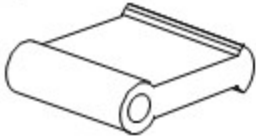
Kit				
F  x6	G  x6	H  x6	I  x2	


Kit				
J  x 12	K  x 6	L  x 6		
M  x 2	N  x 1	O  x 6	P  x 4	

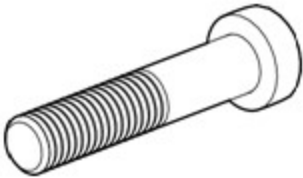Kit		
Q  x 6	R  x 6	S  x 6

Kit	
T  x 2	U  x 2

Manual(s)	
 Manual  x 1	 TÜV x 1

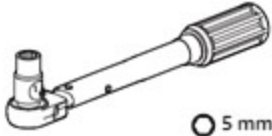 Tools and materials needed				
 24 mm		1 - 25 Nm  5 mm T15, T30	 Rust protection Rostschutzmittel Anti-rouille Anti roest	
				

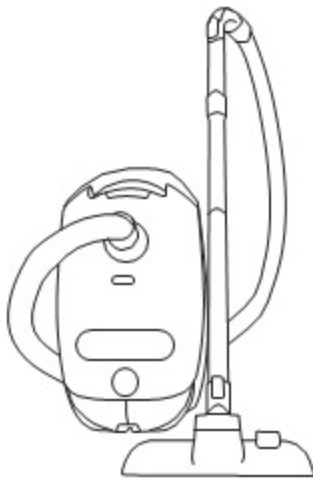
 Applying rust protection		
		




In order to avoid paint damage, the loading space must be masked before the assembly.

Removing the masking carefully after the assembly so that no borings and other hard waste can reach onto the loading space. Nevertheless there should be single borings waste on the loading space, discharge these.


1

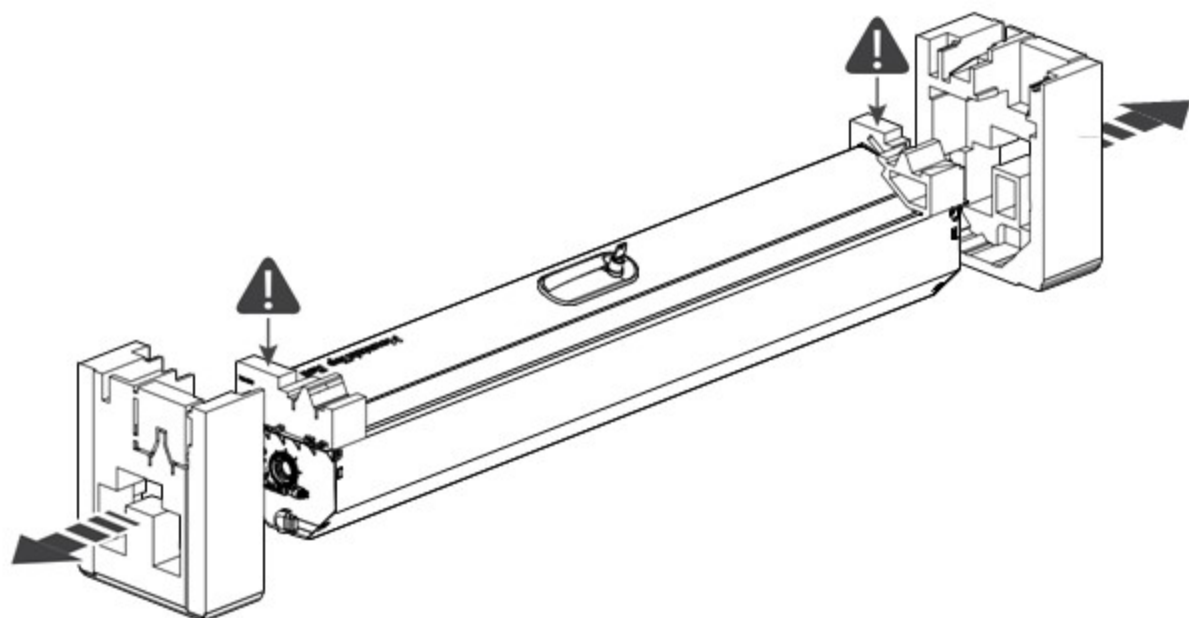




2

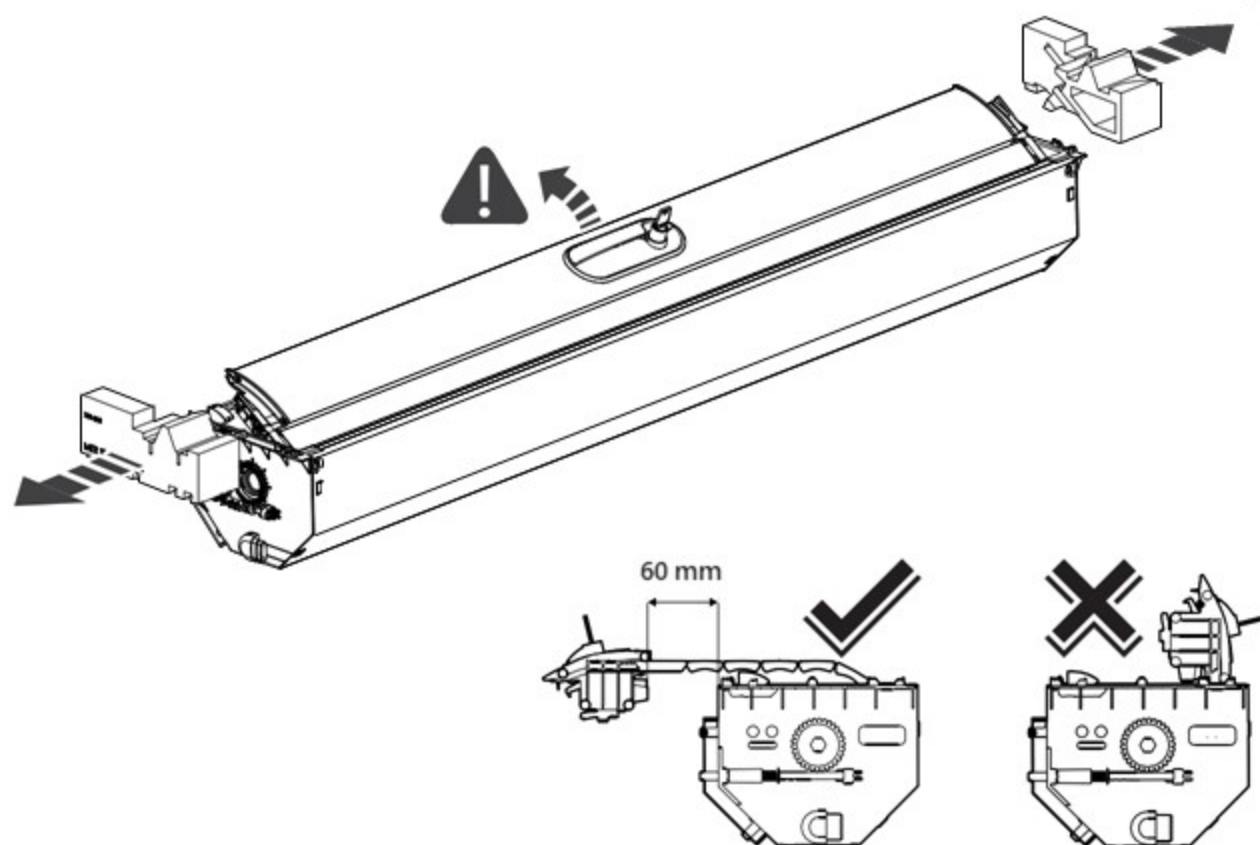


3

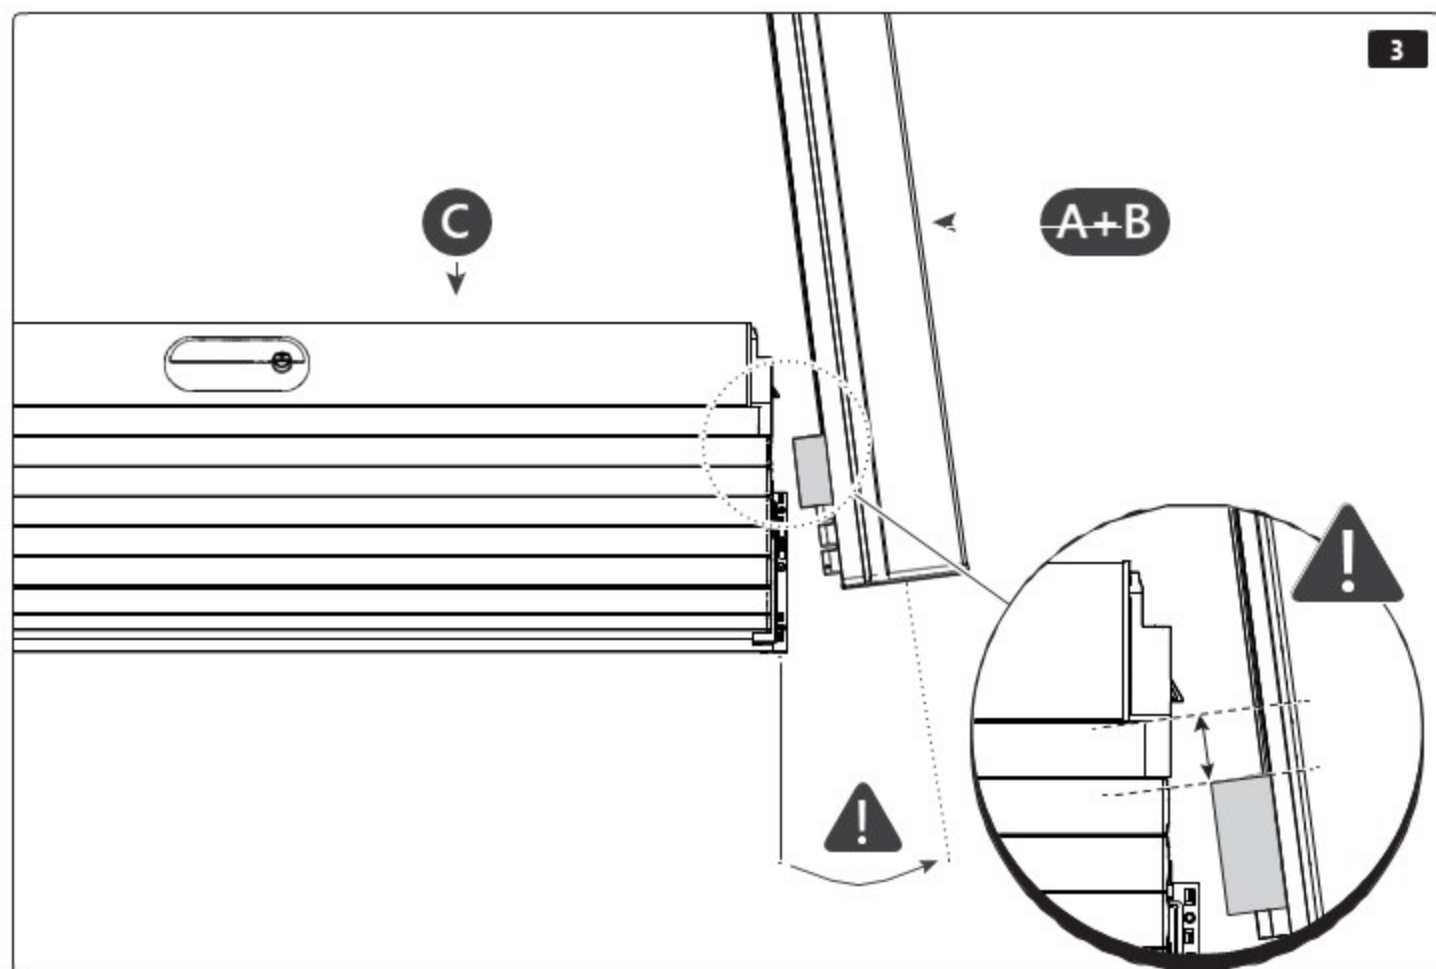

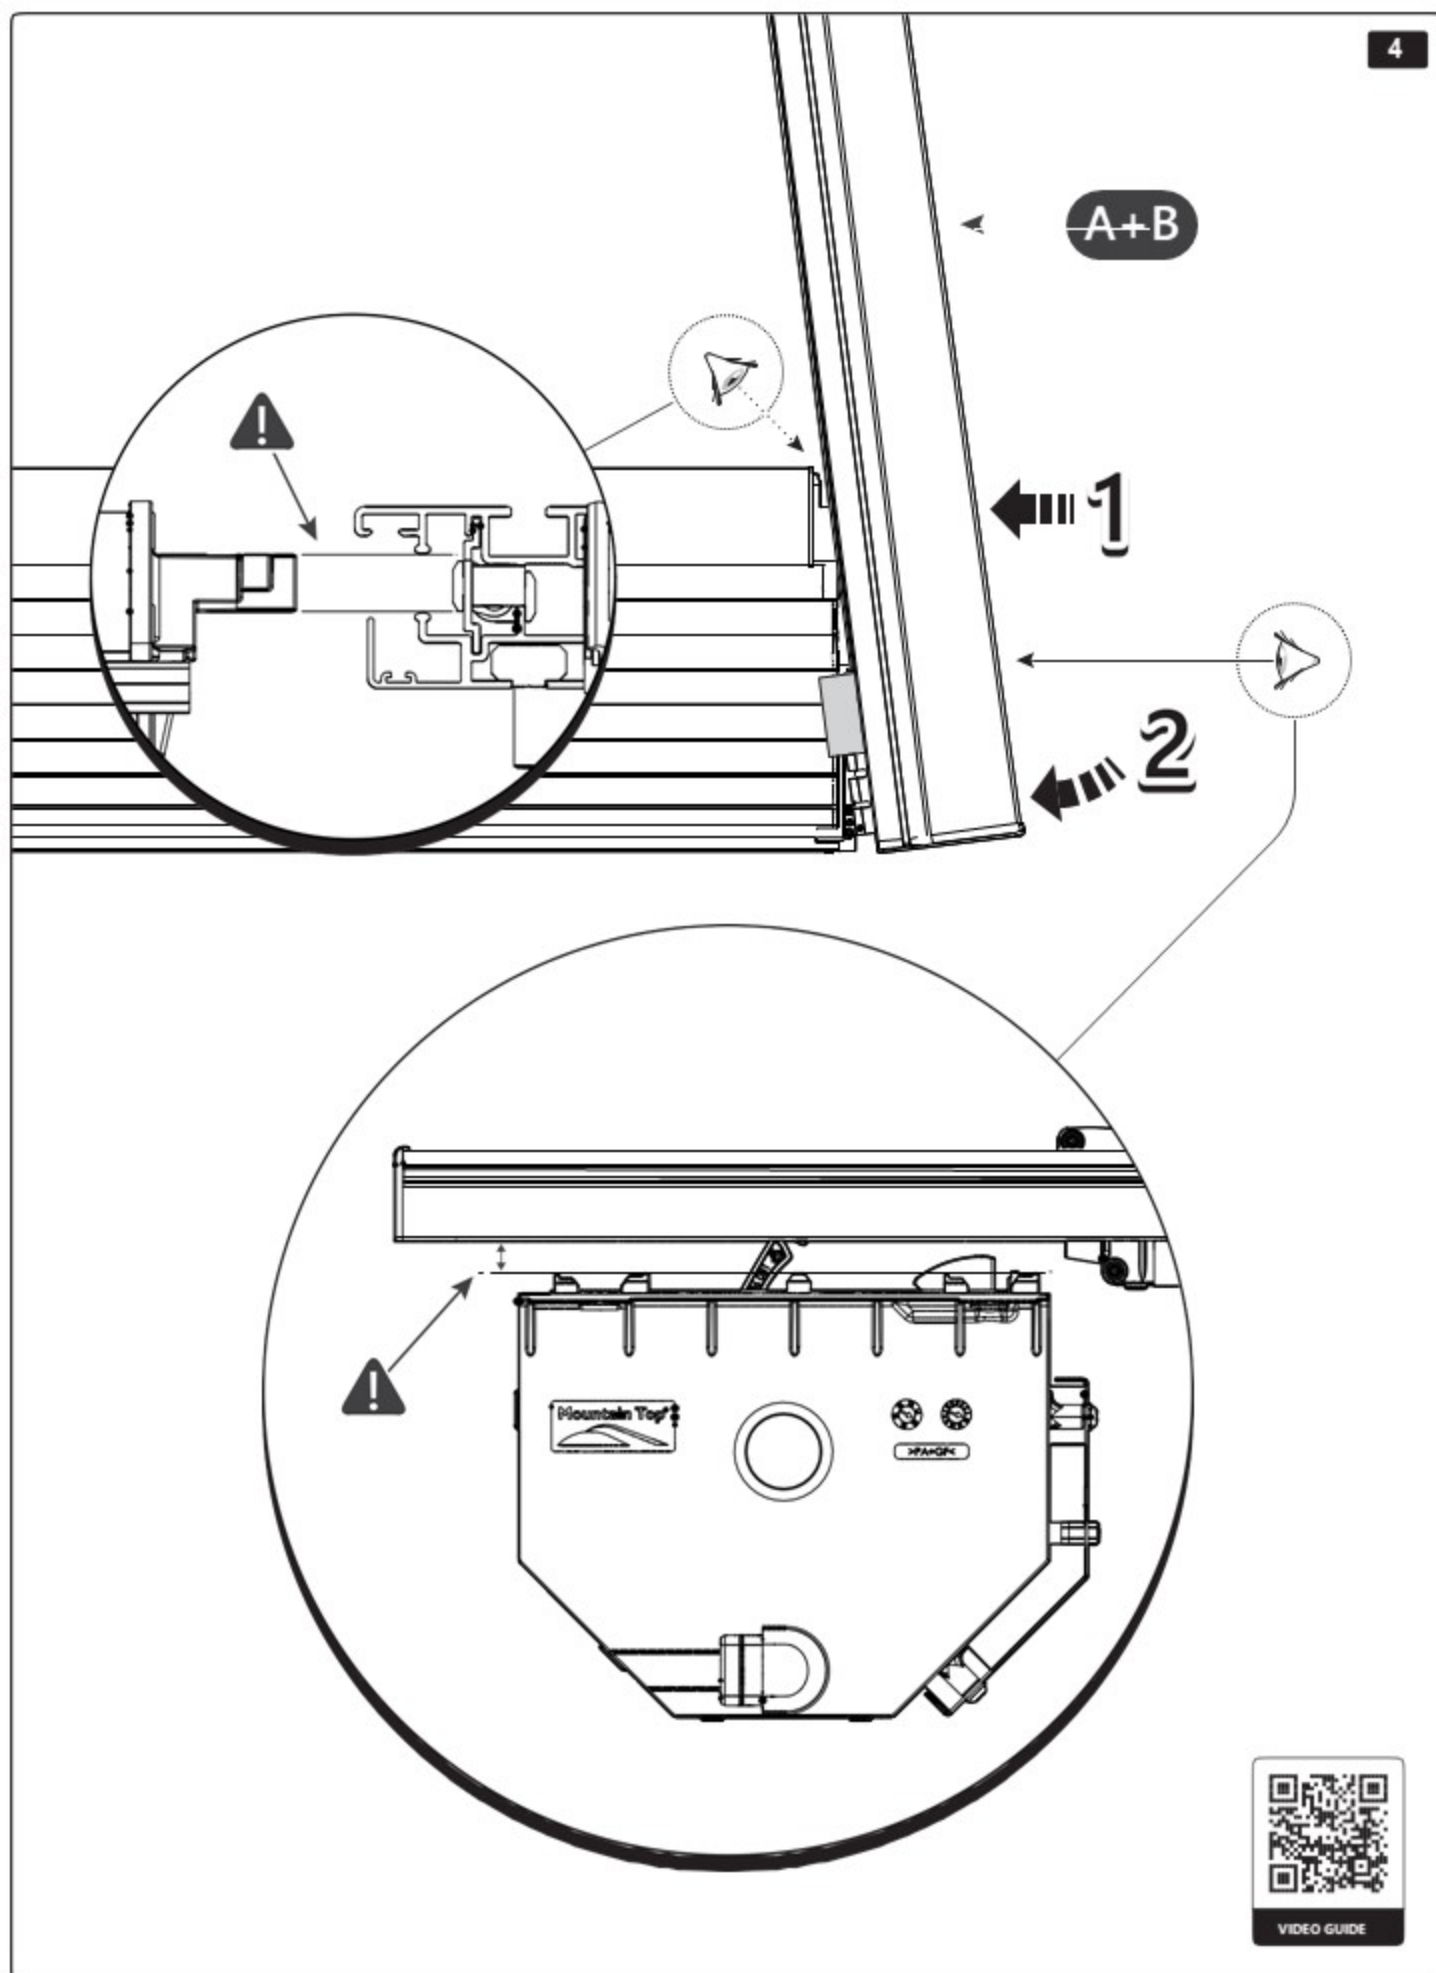



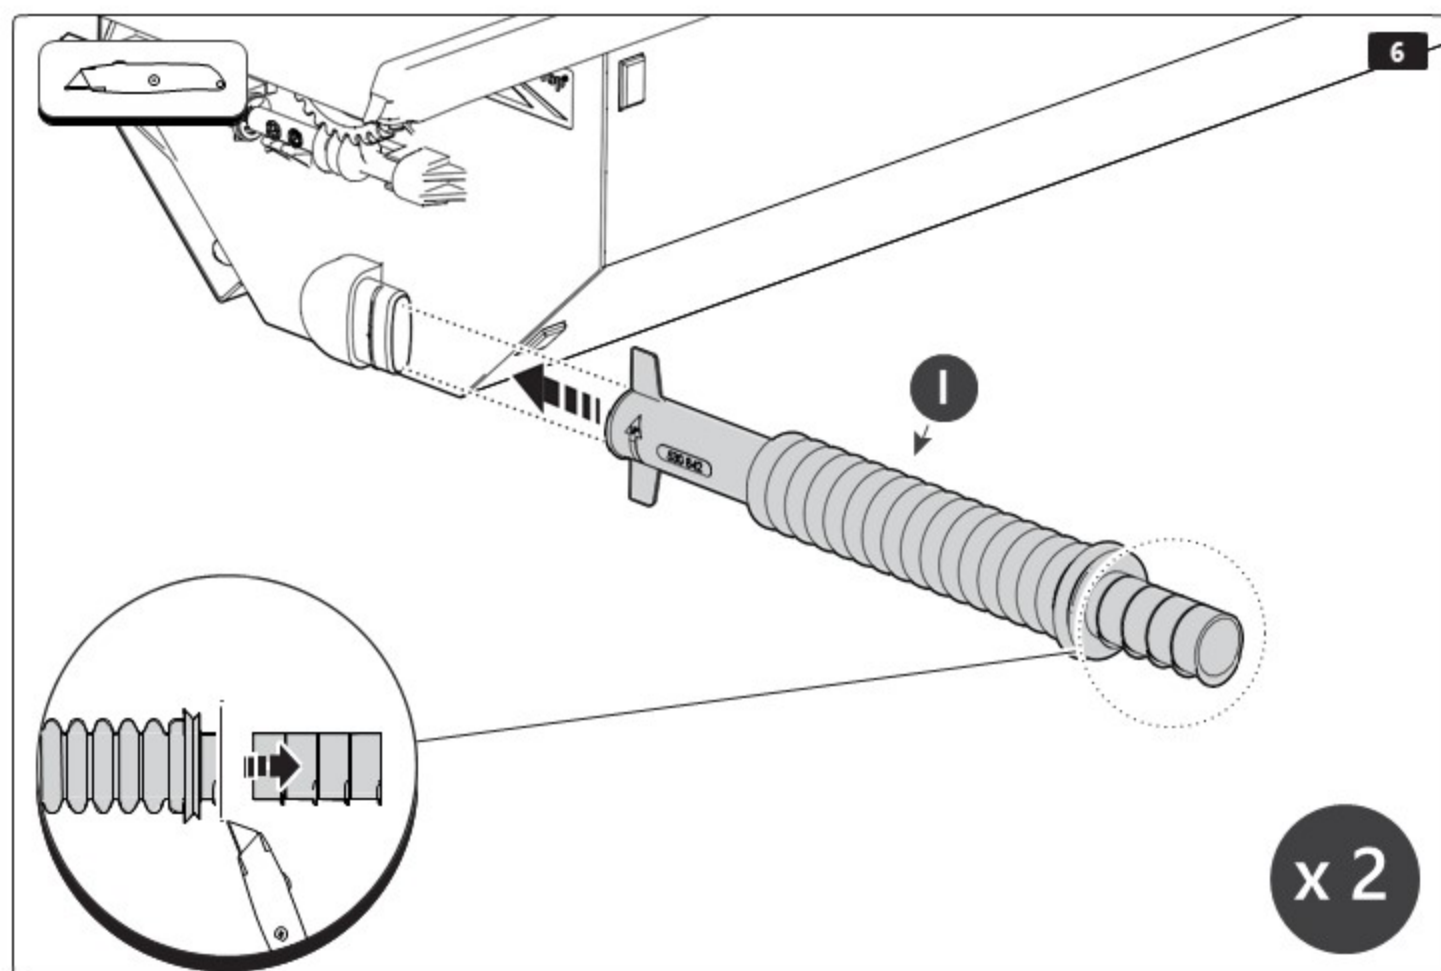
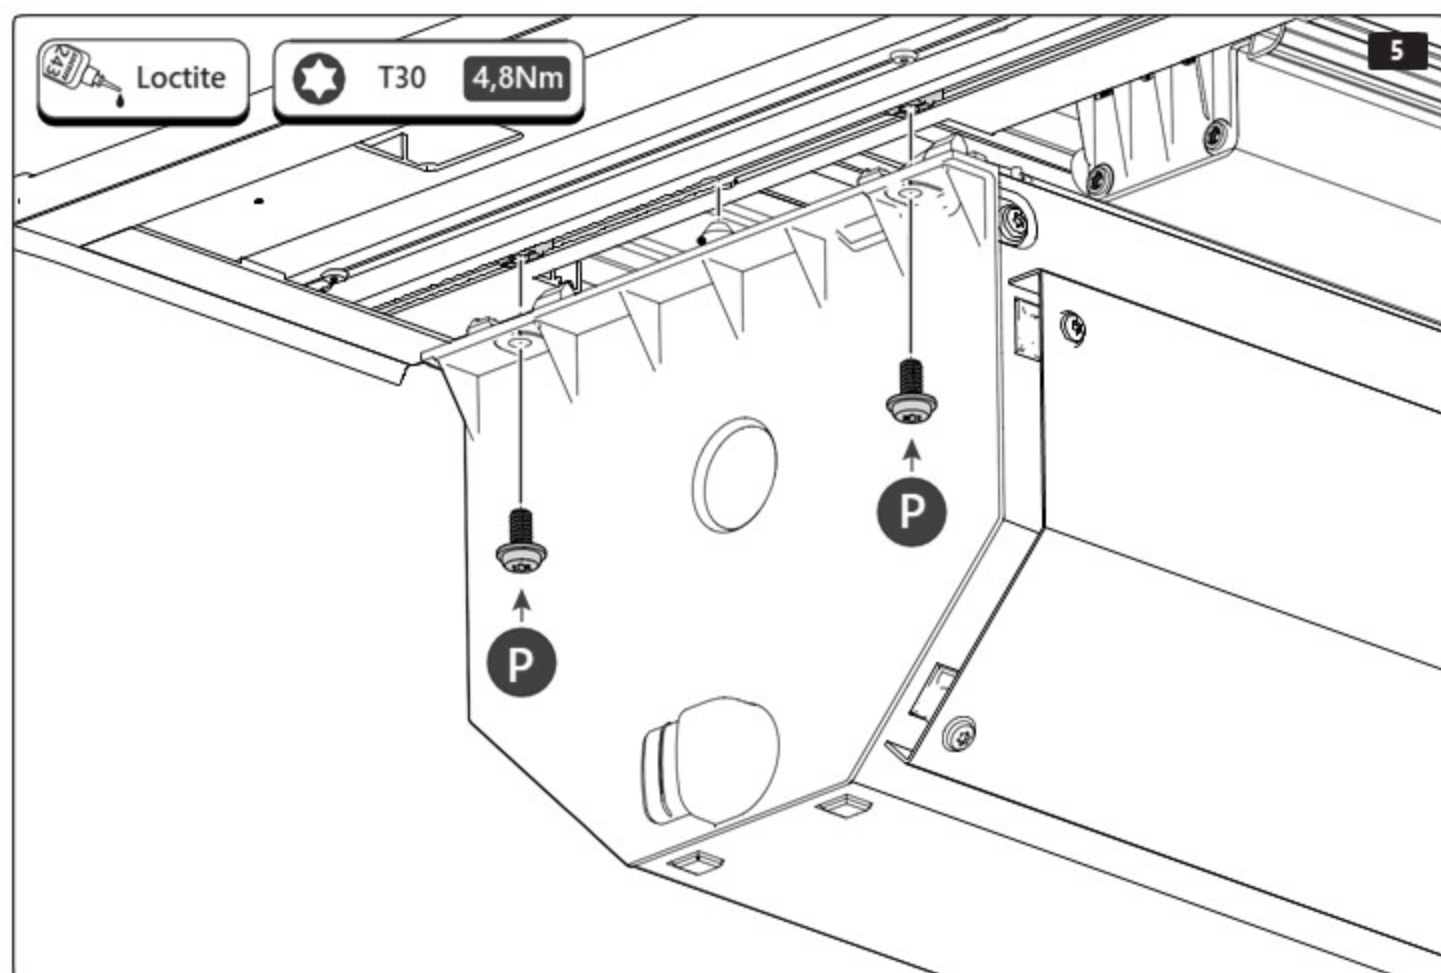





7


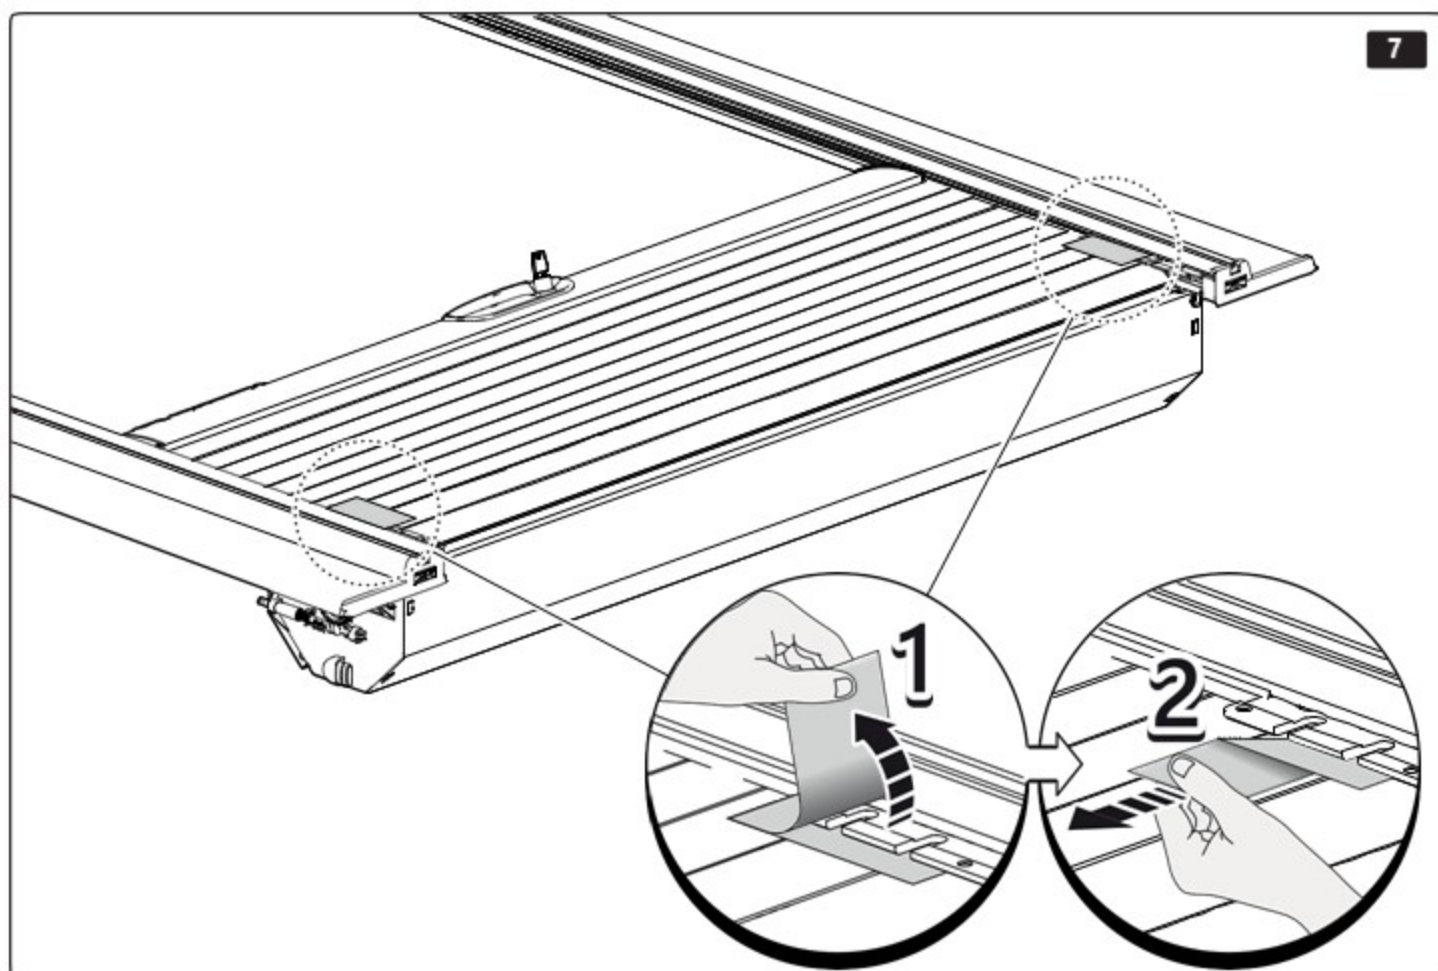




8


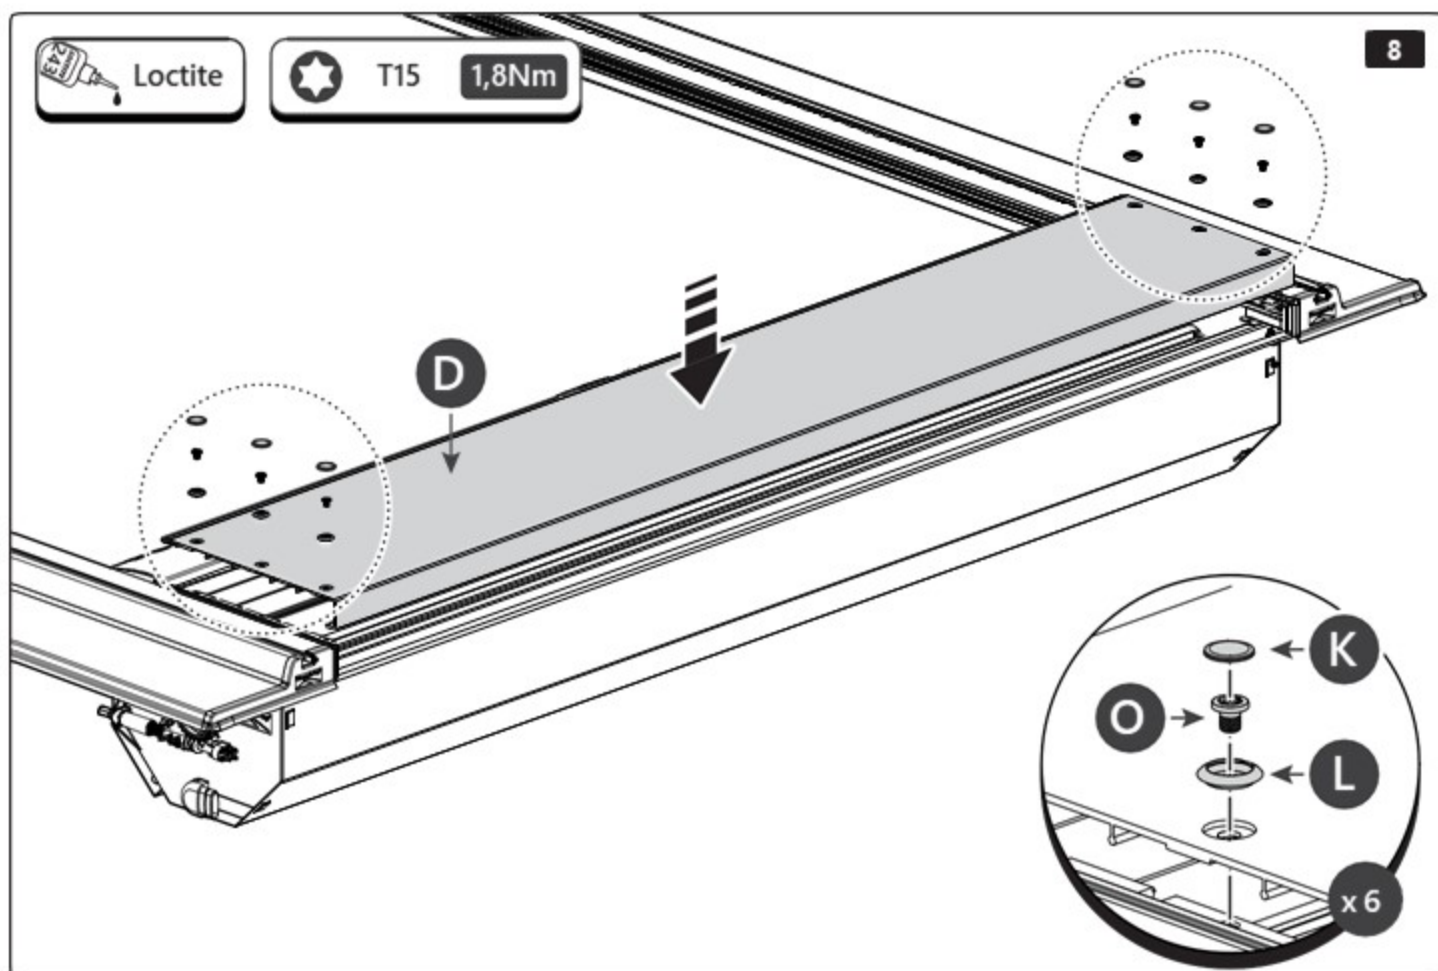


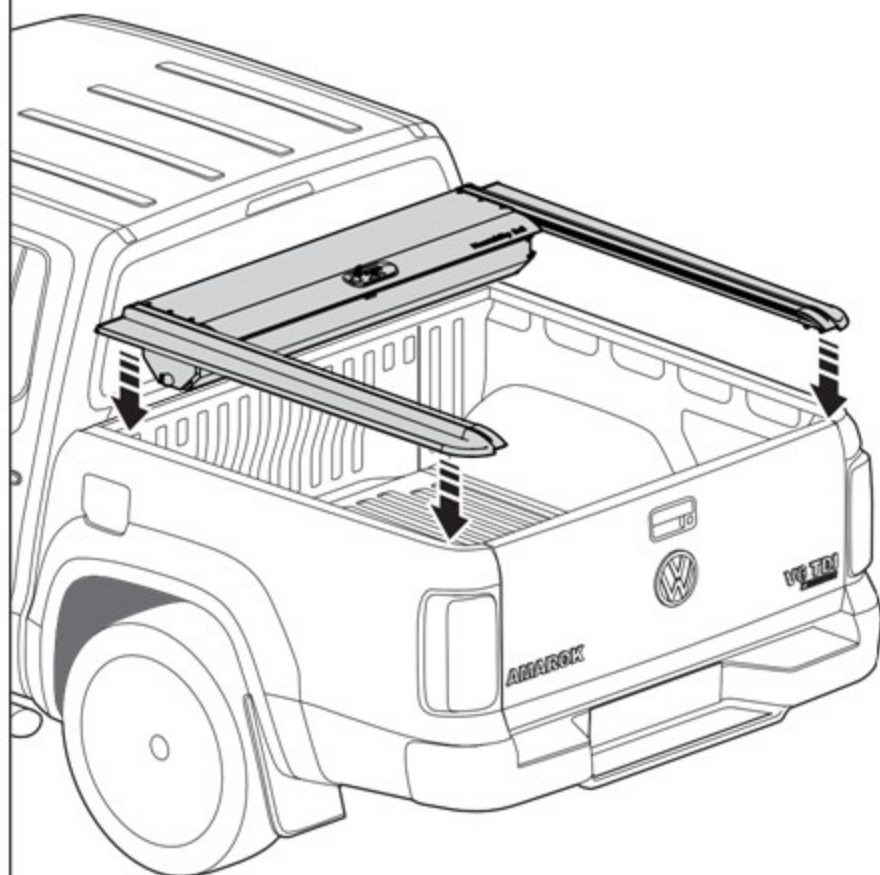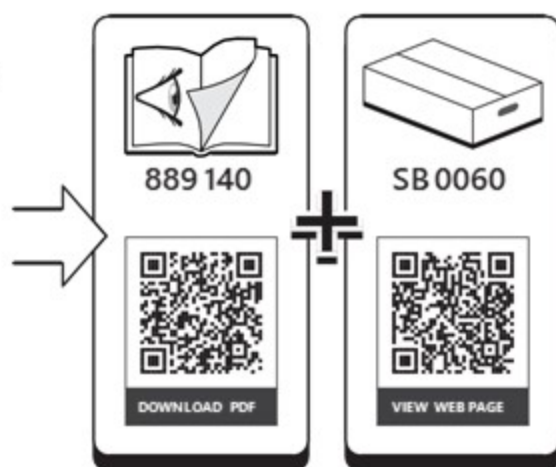
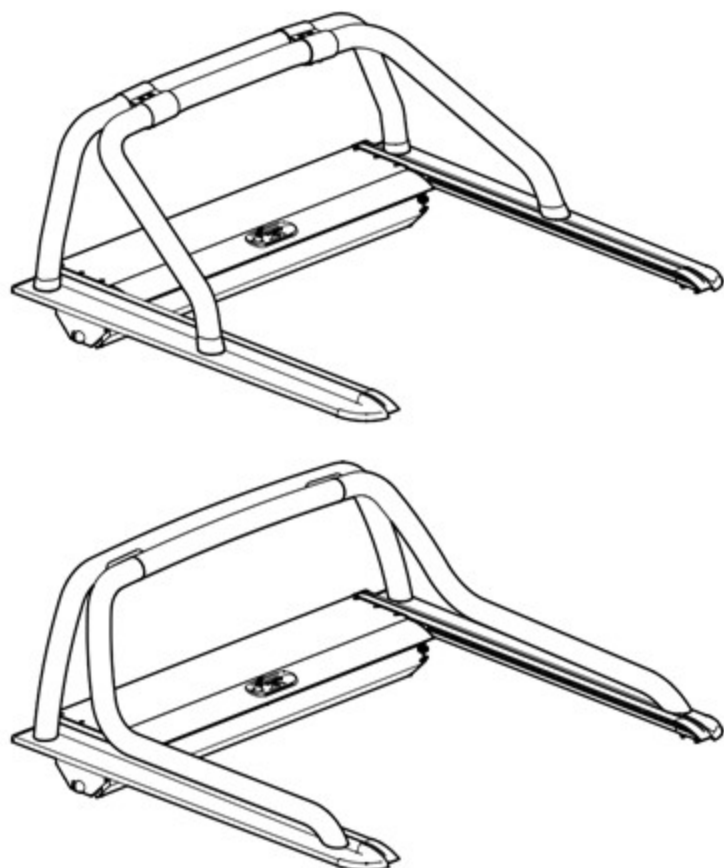


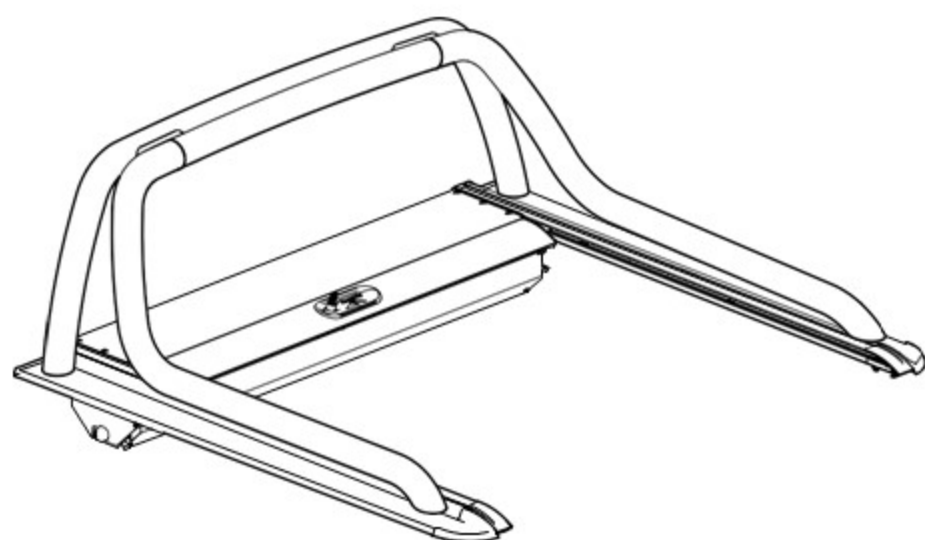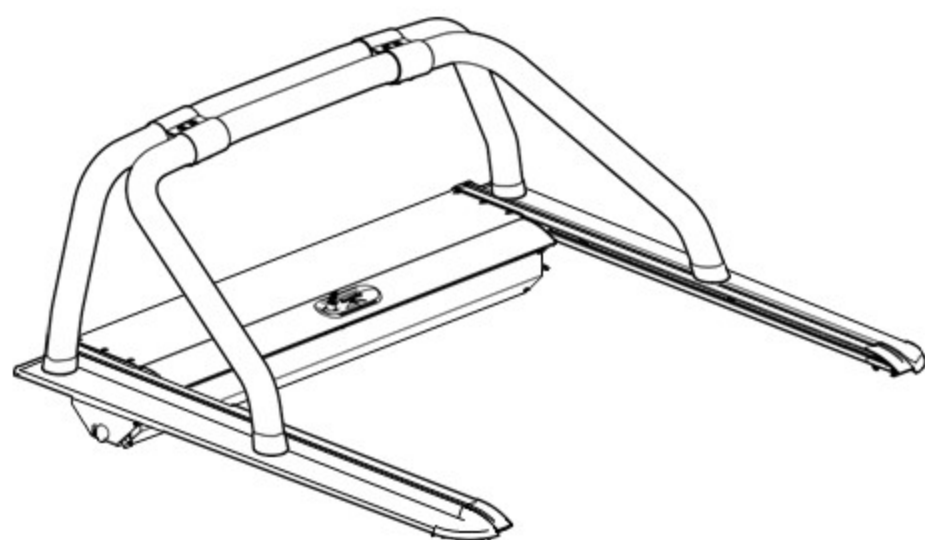
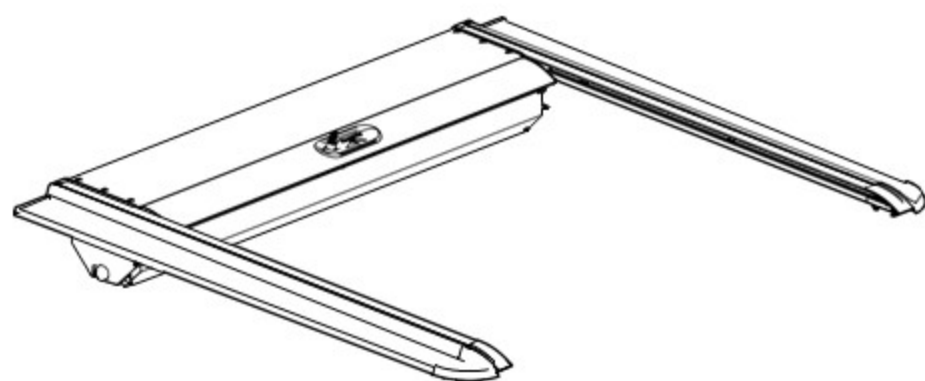


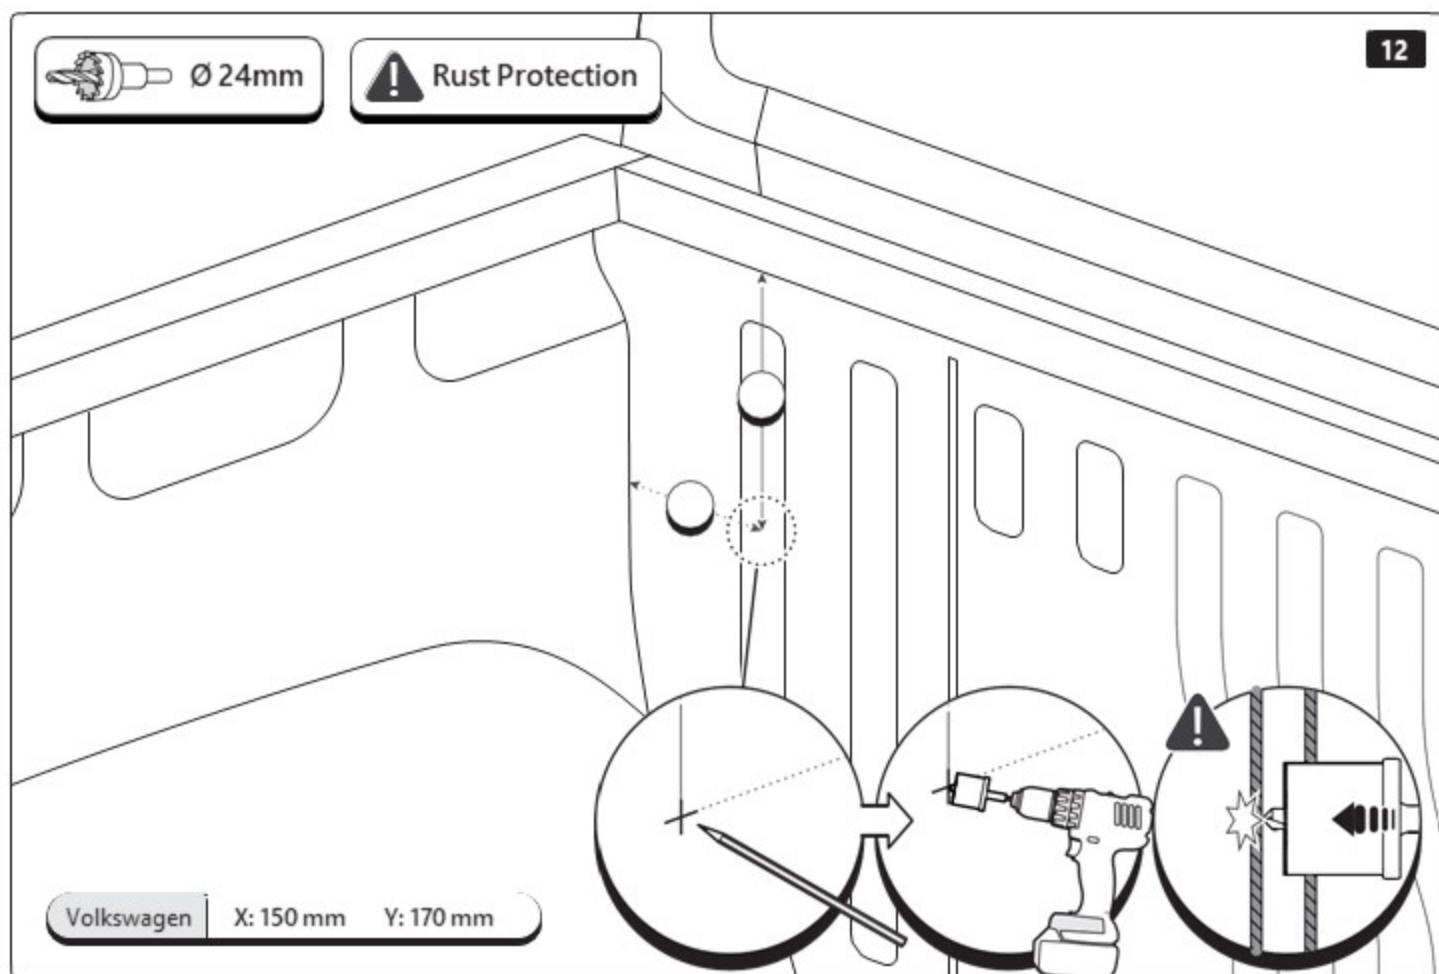
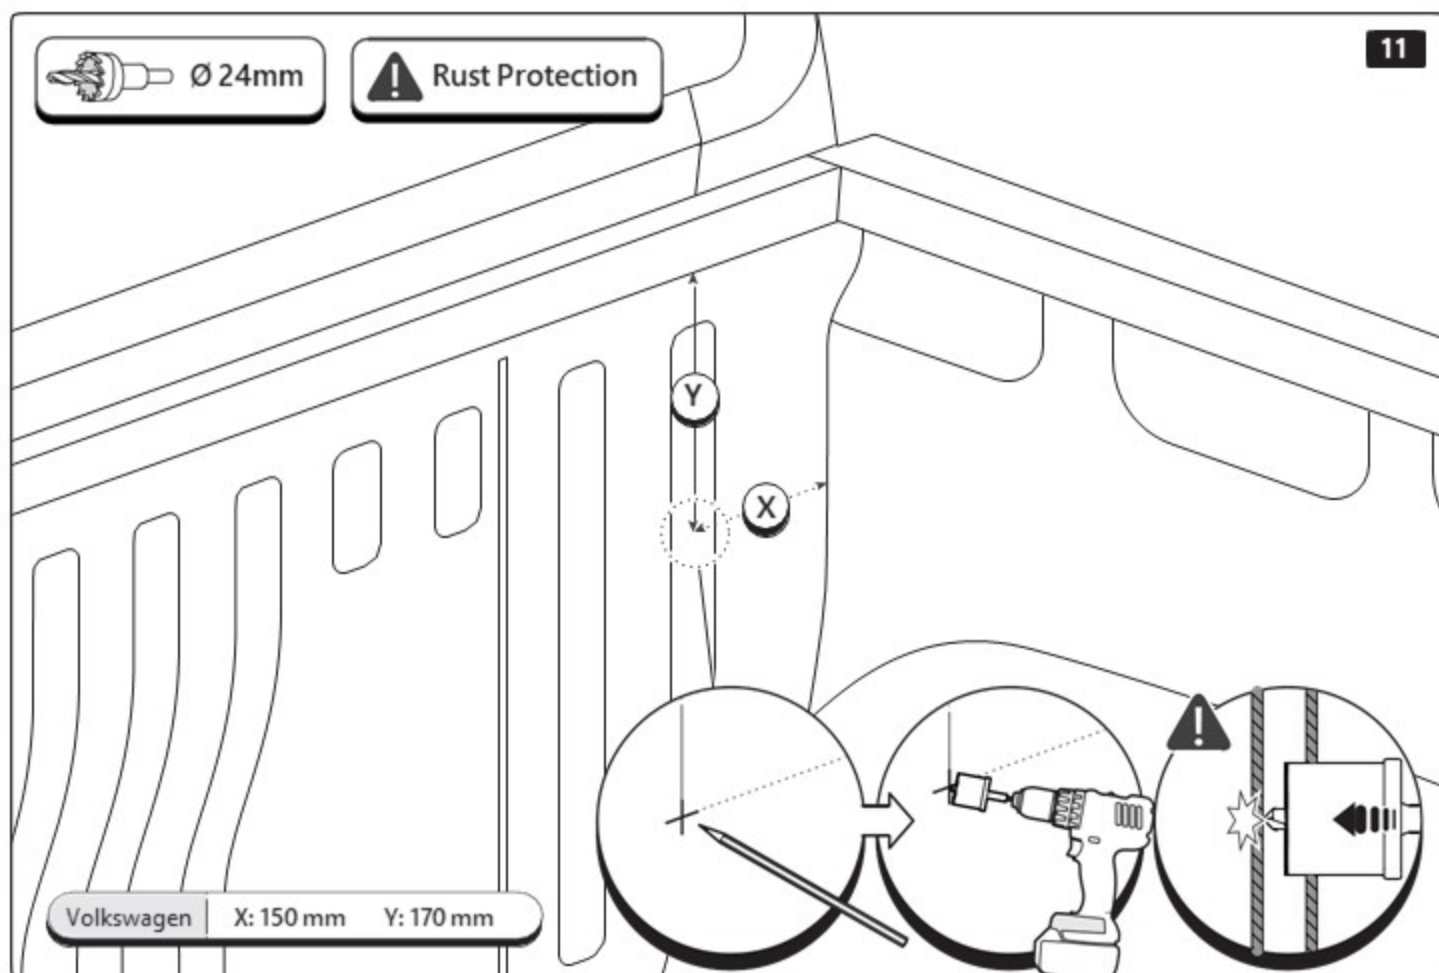


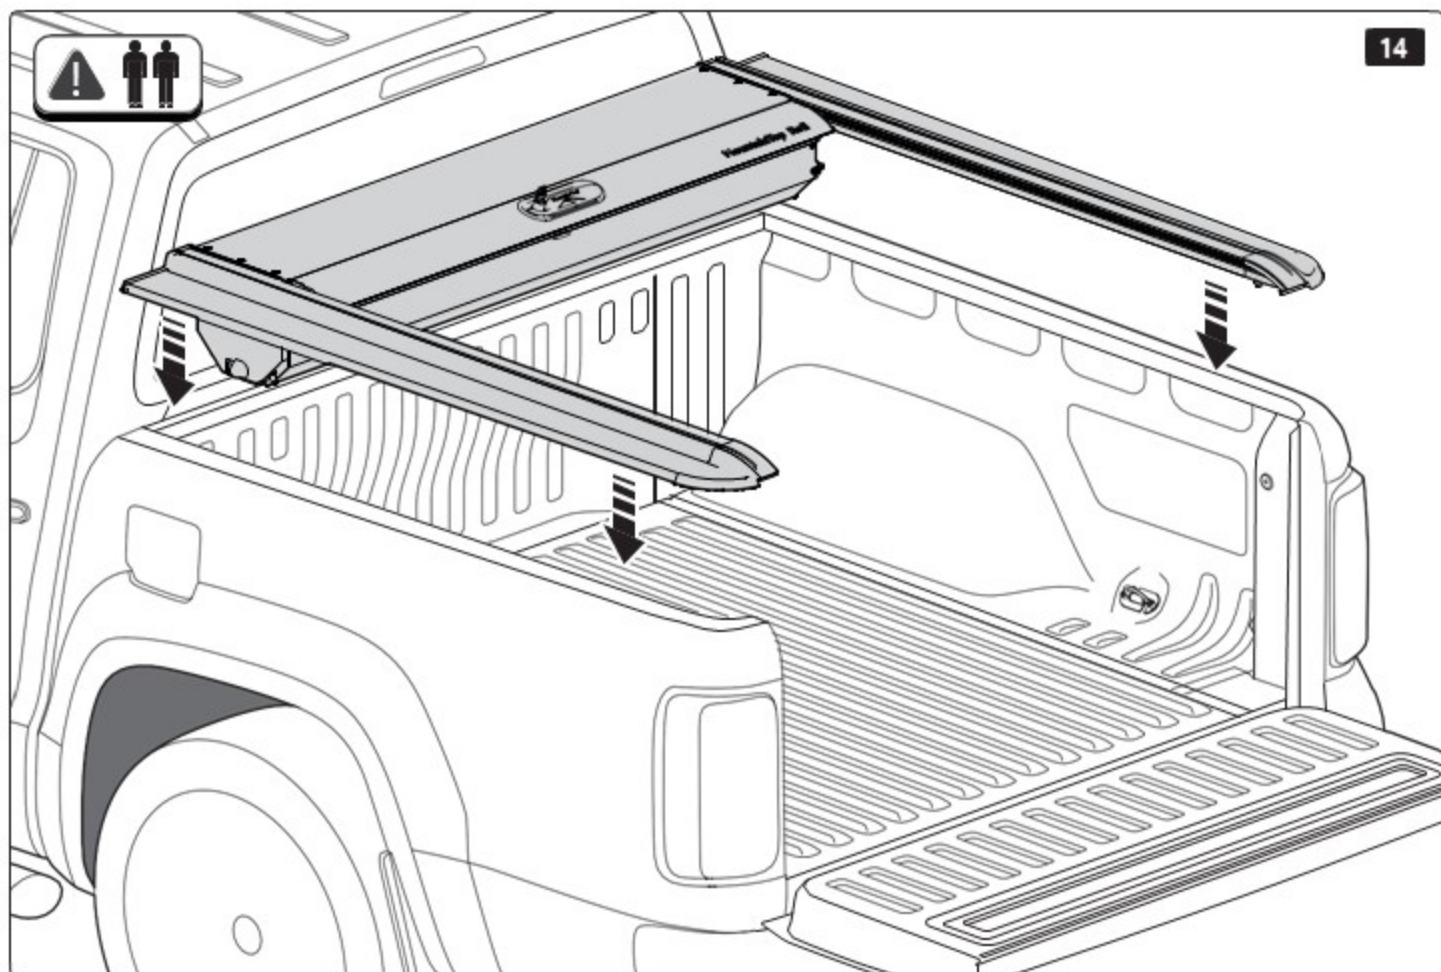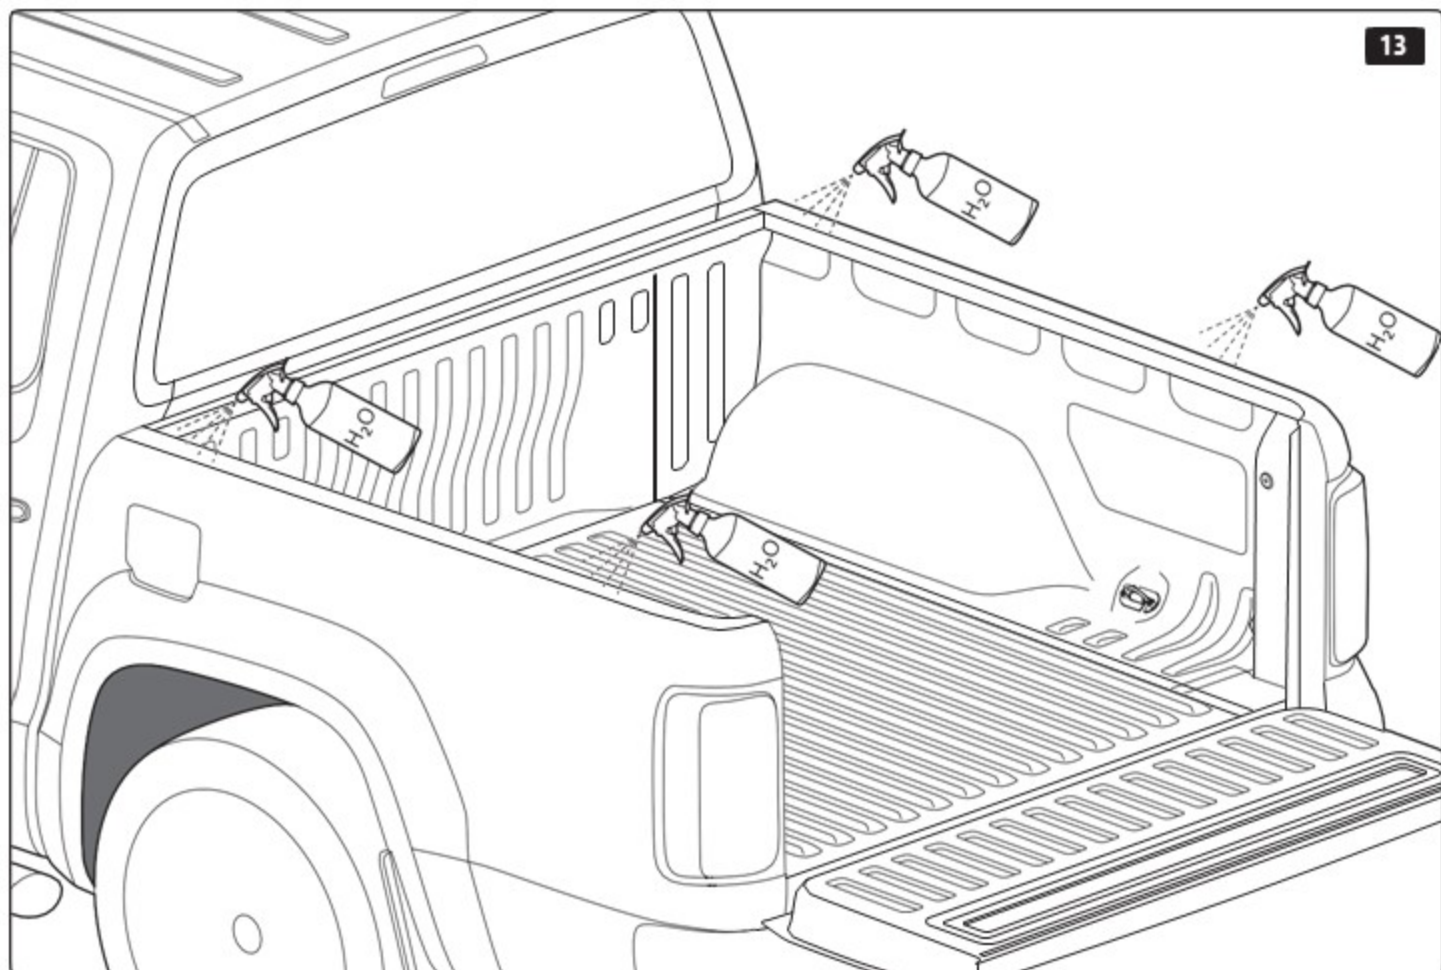


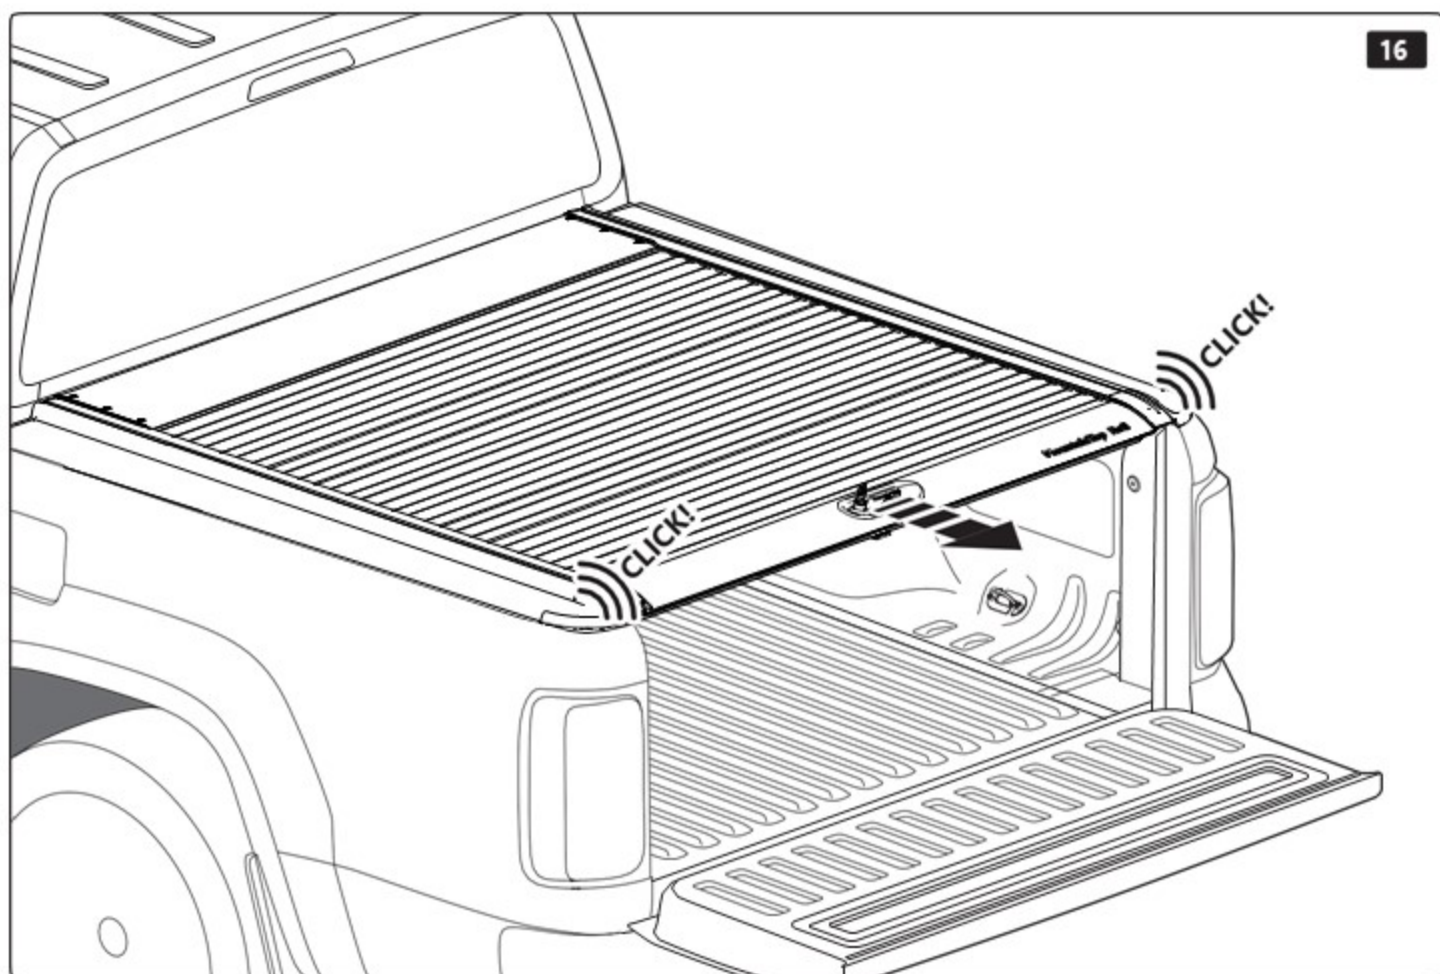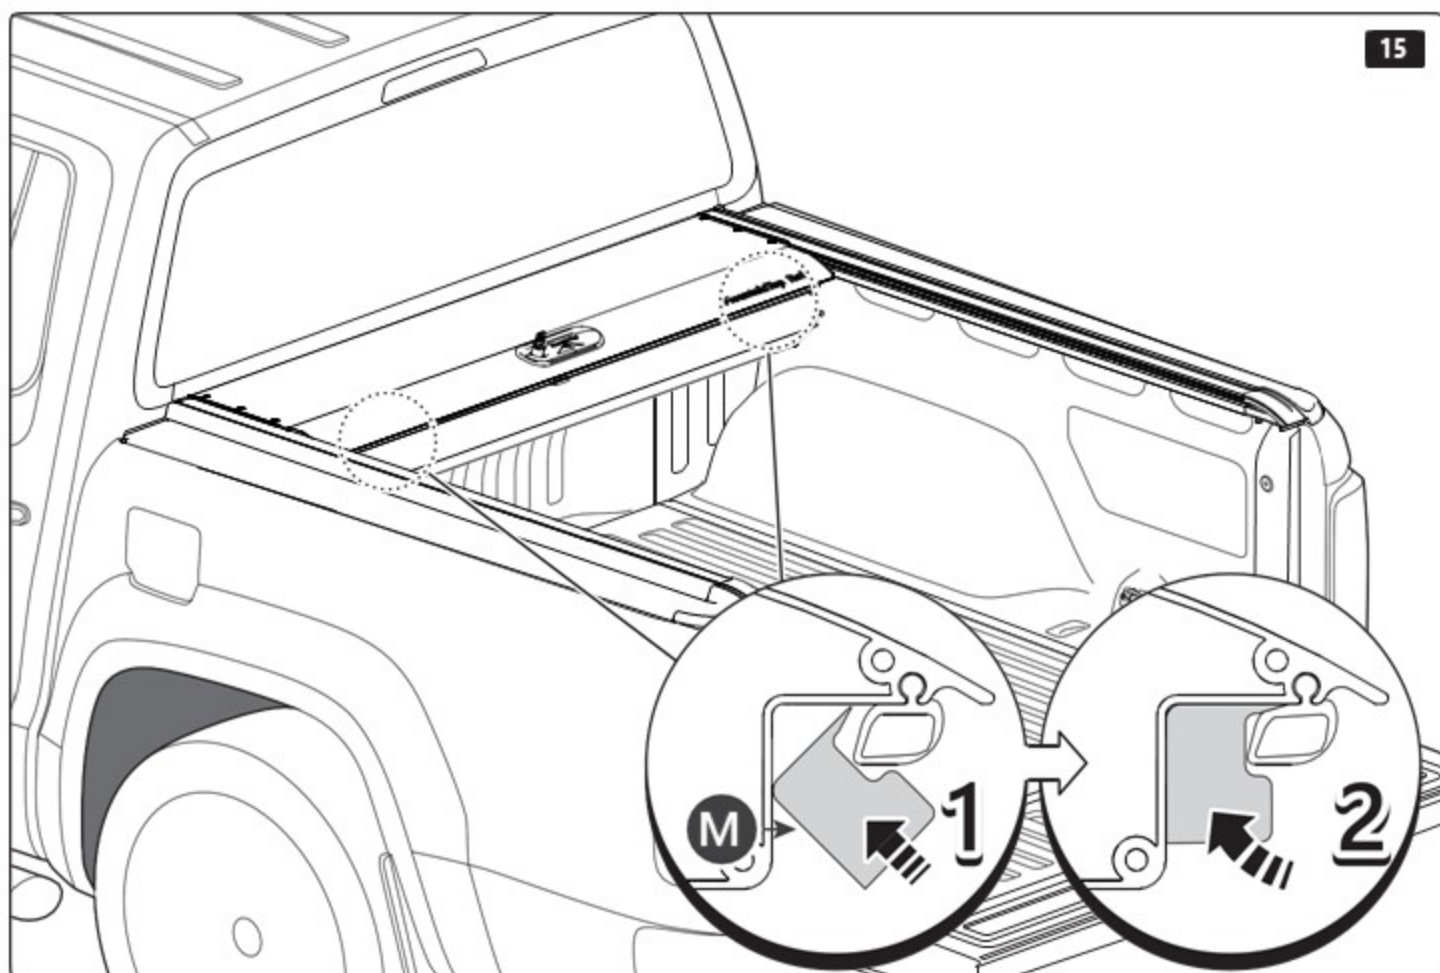

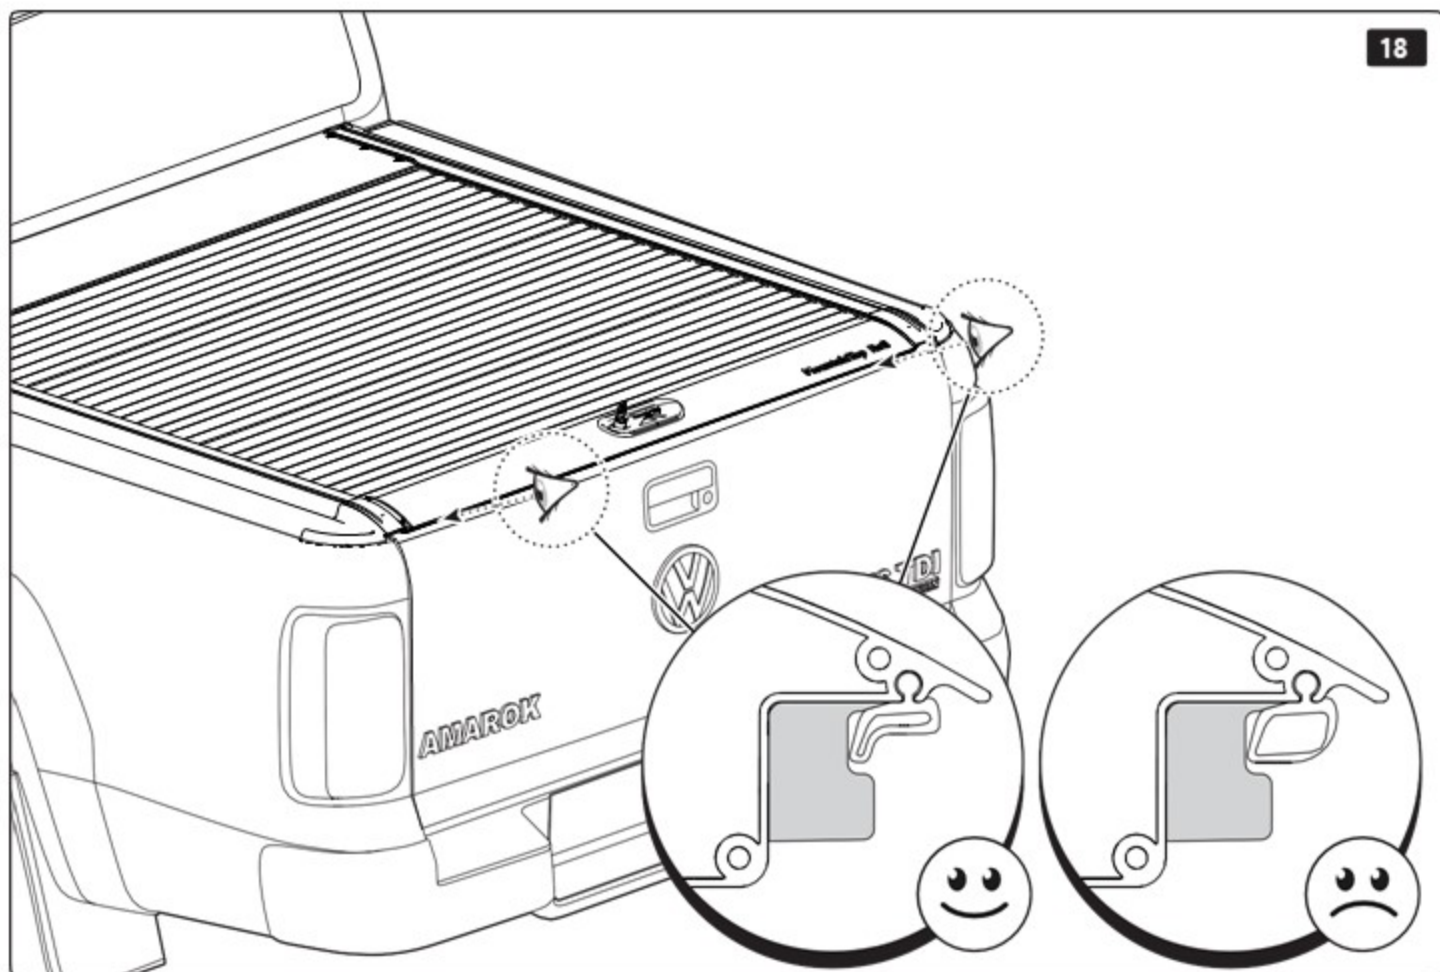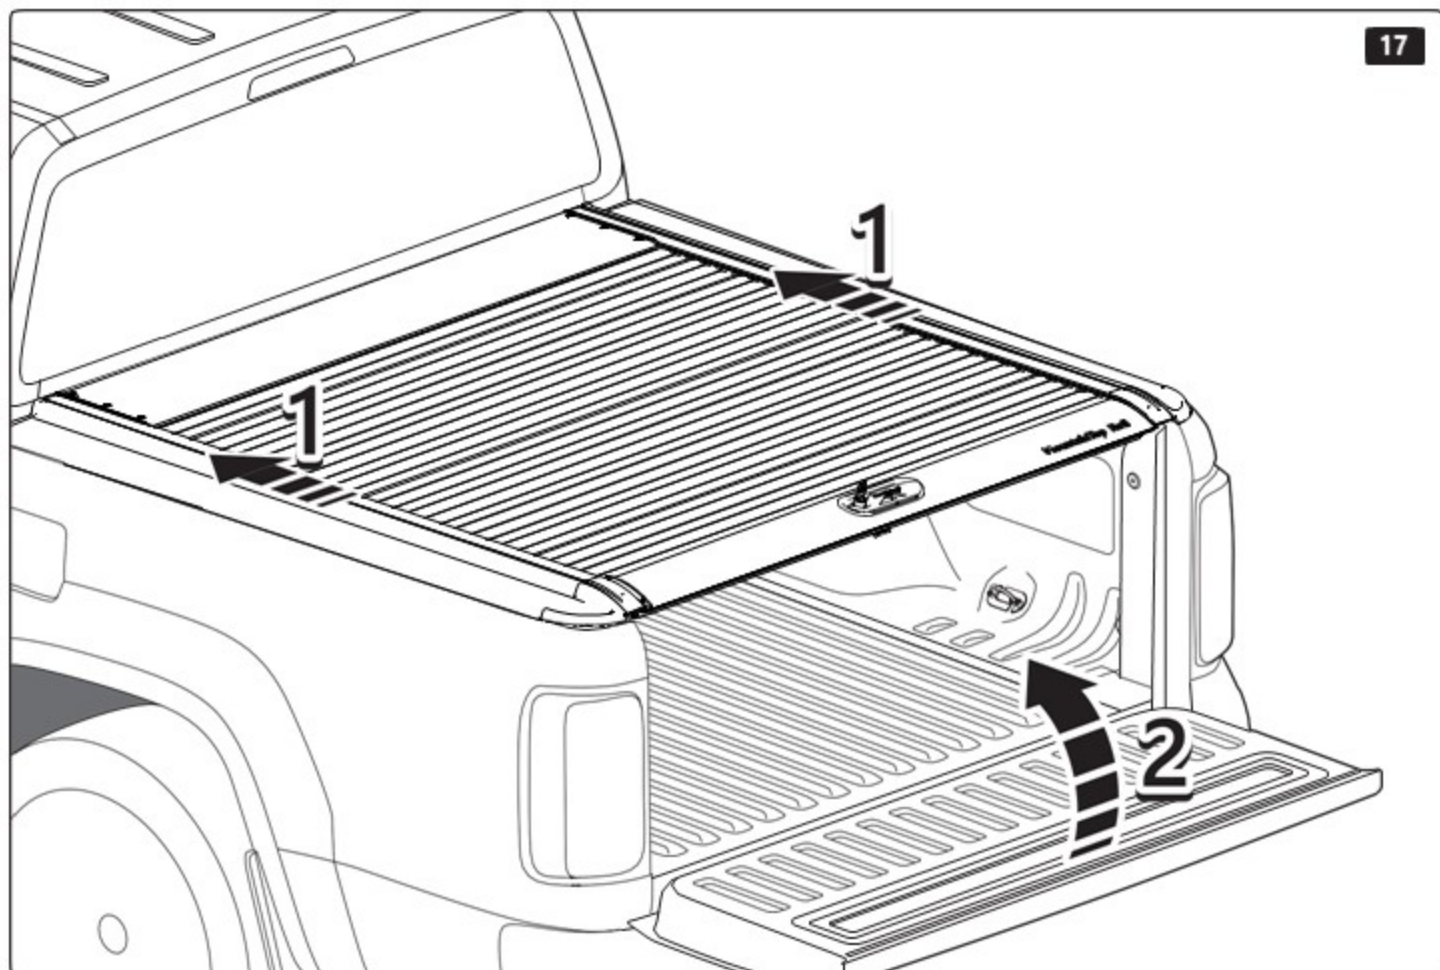


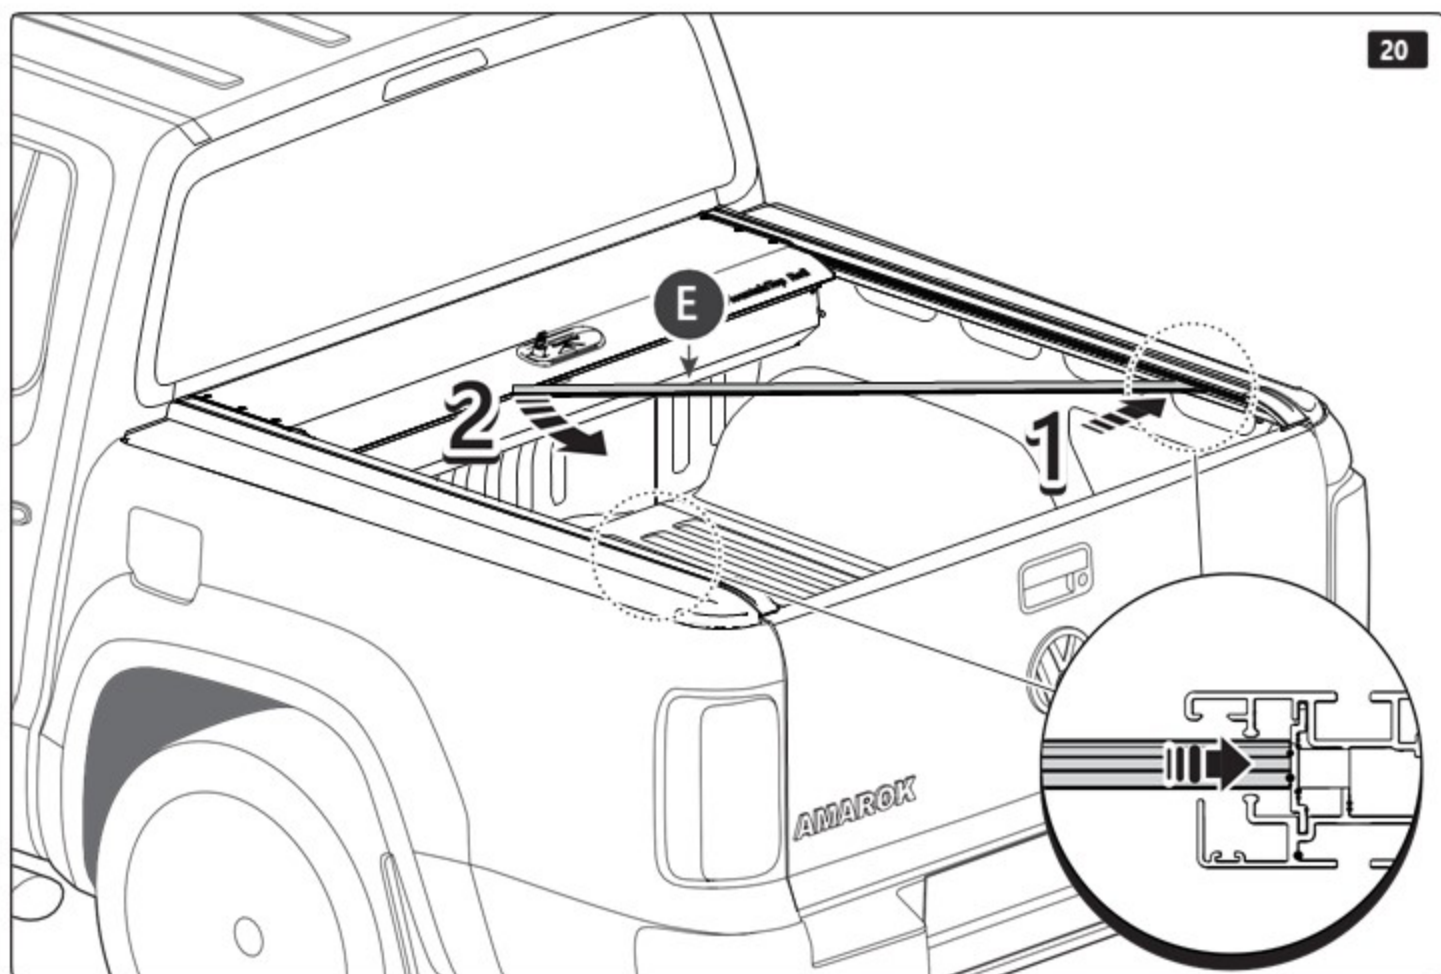
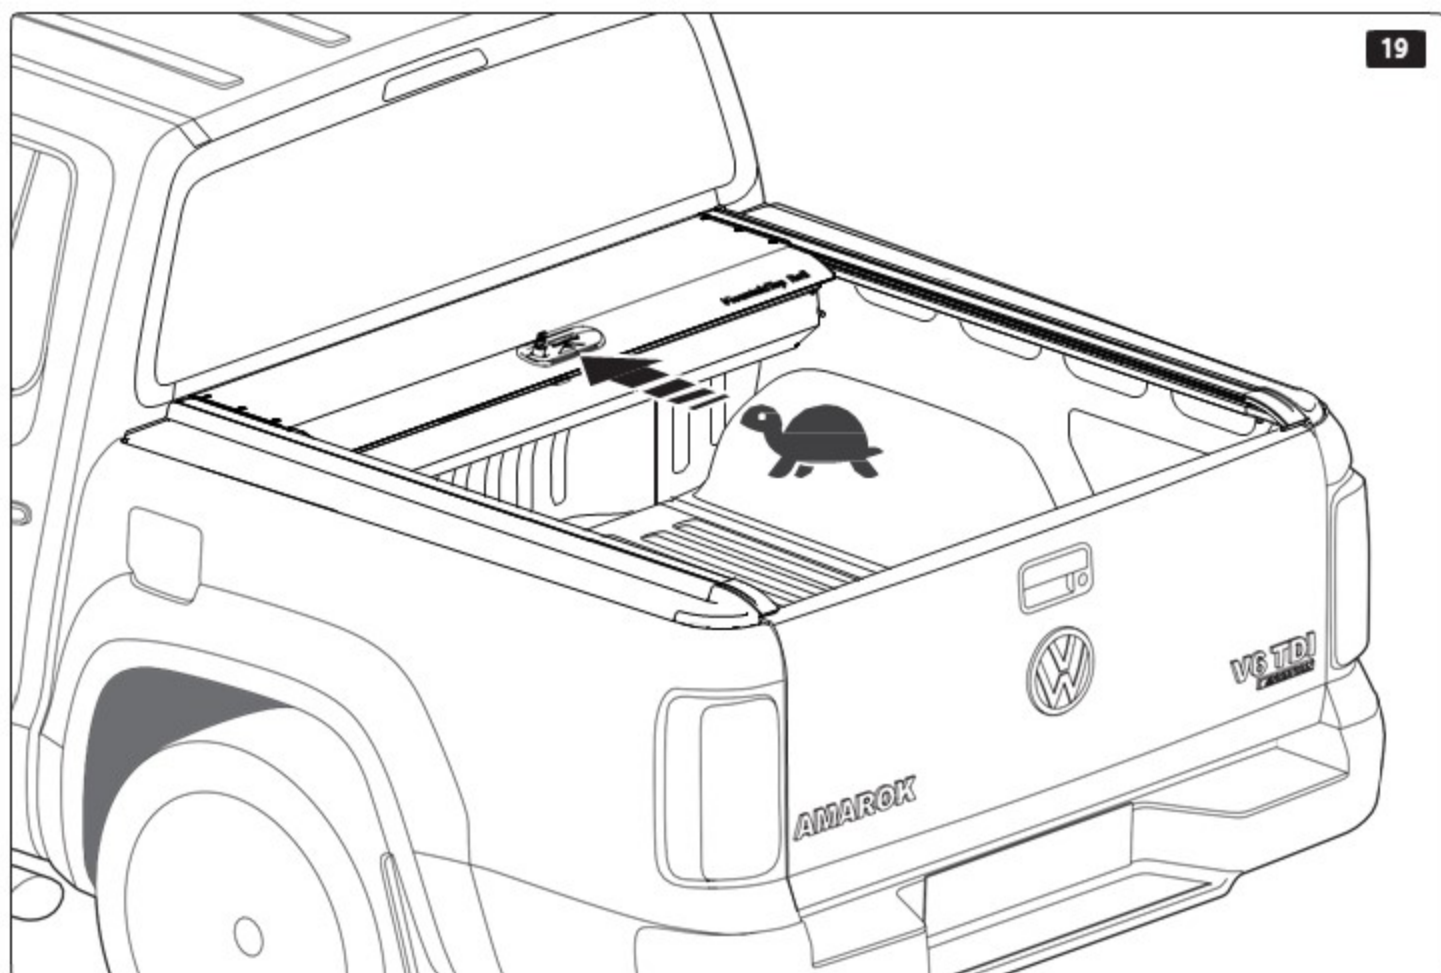


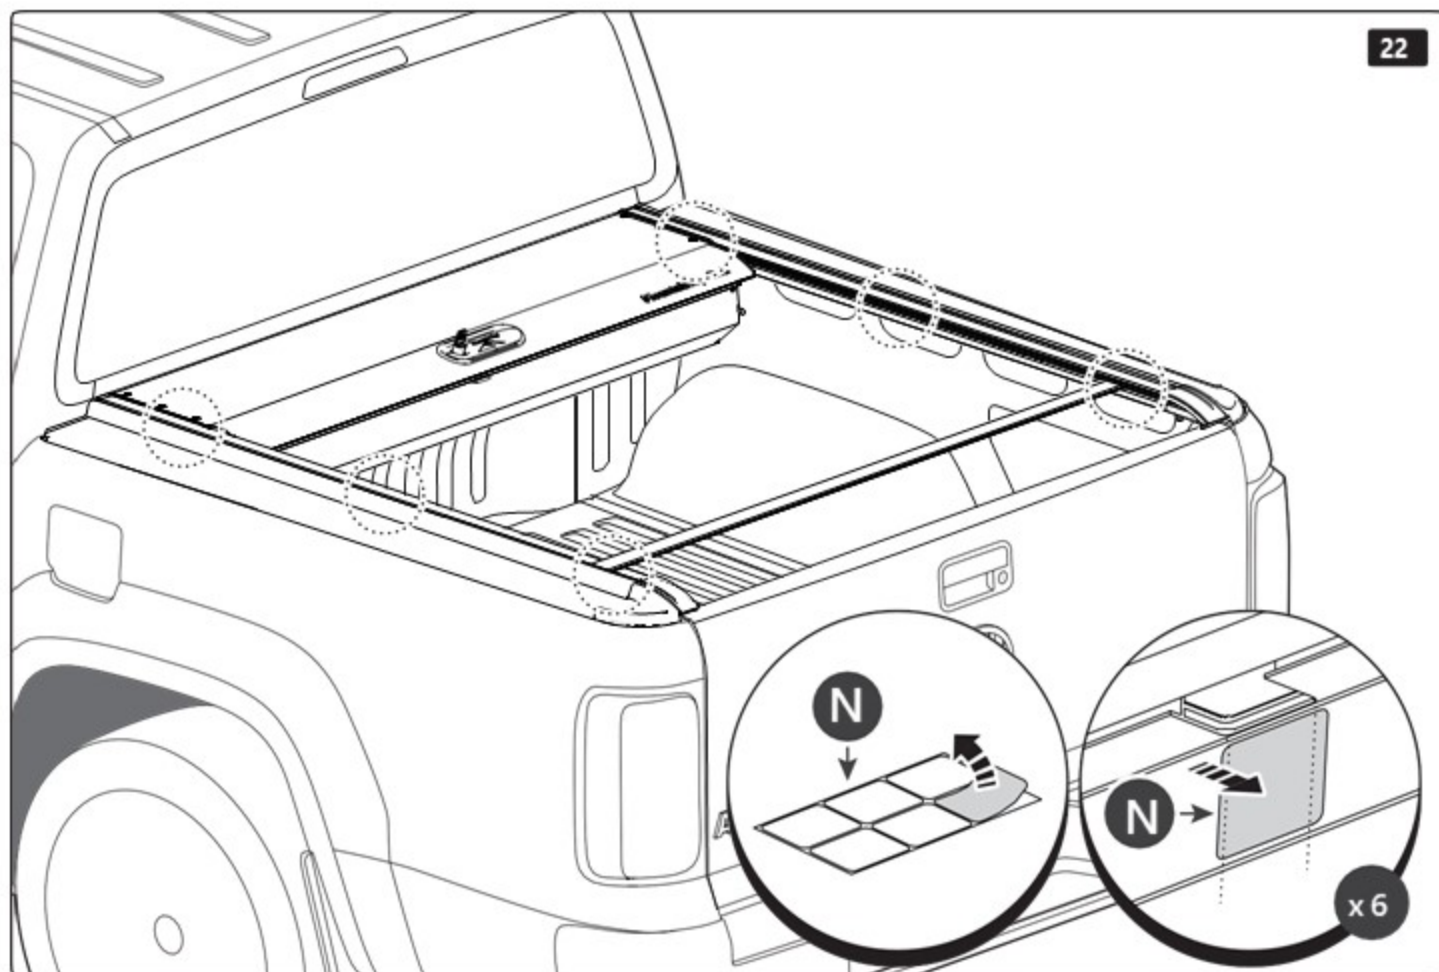
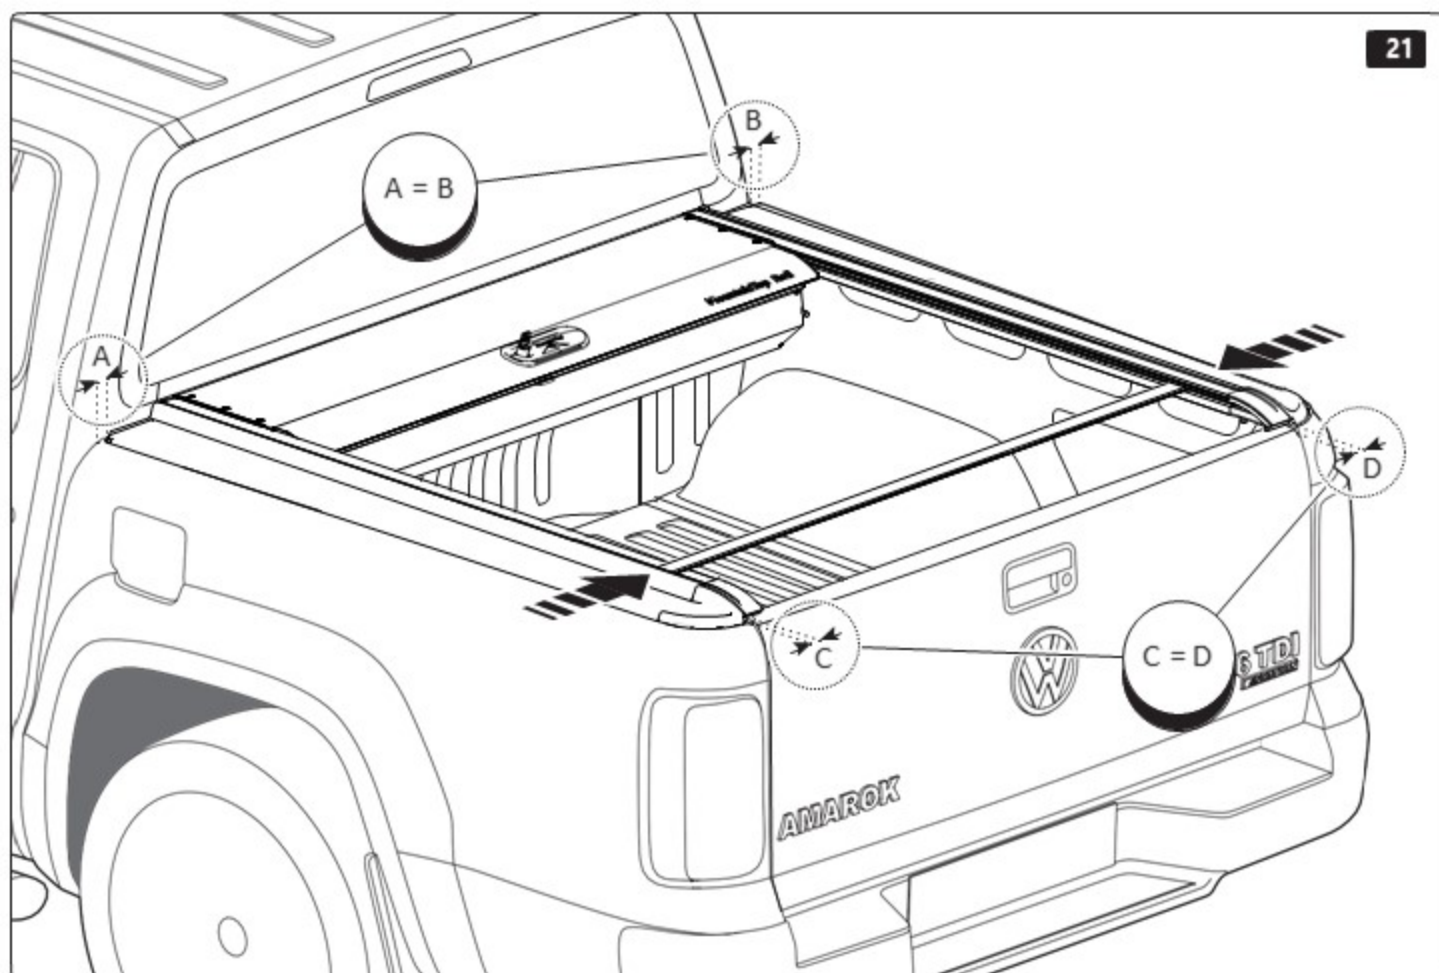



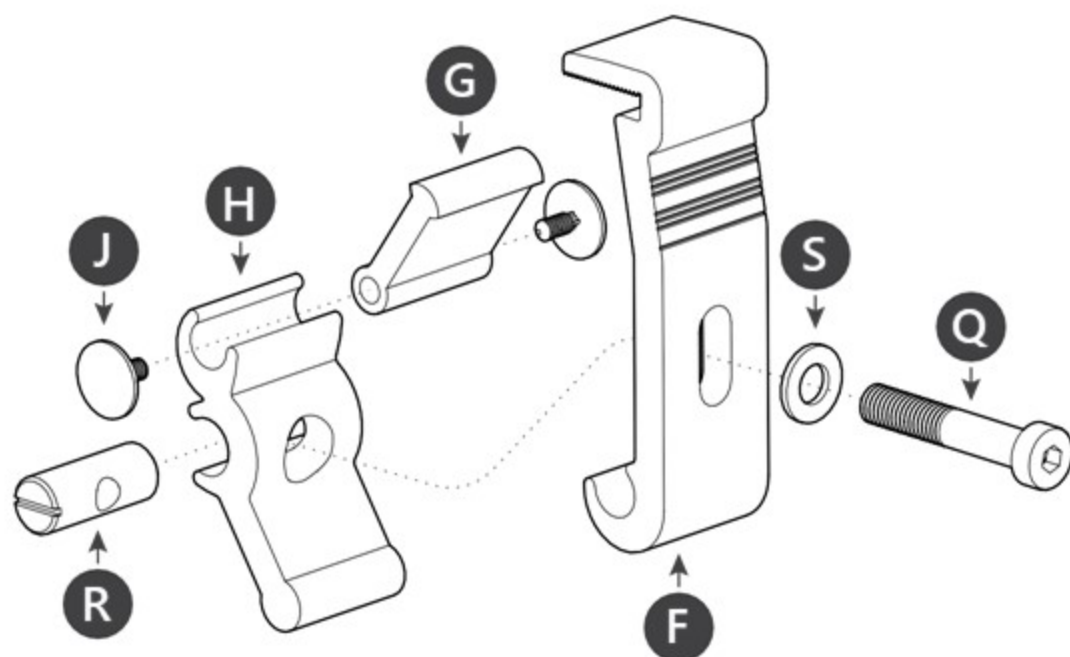




x 6

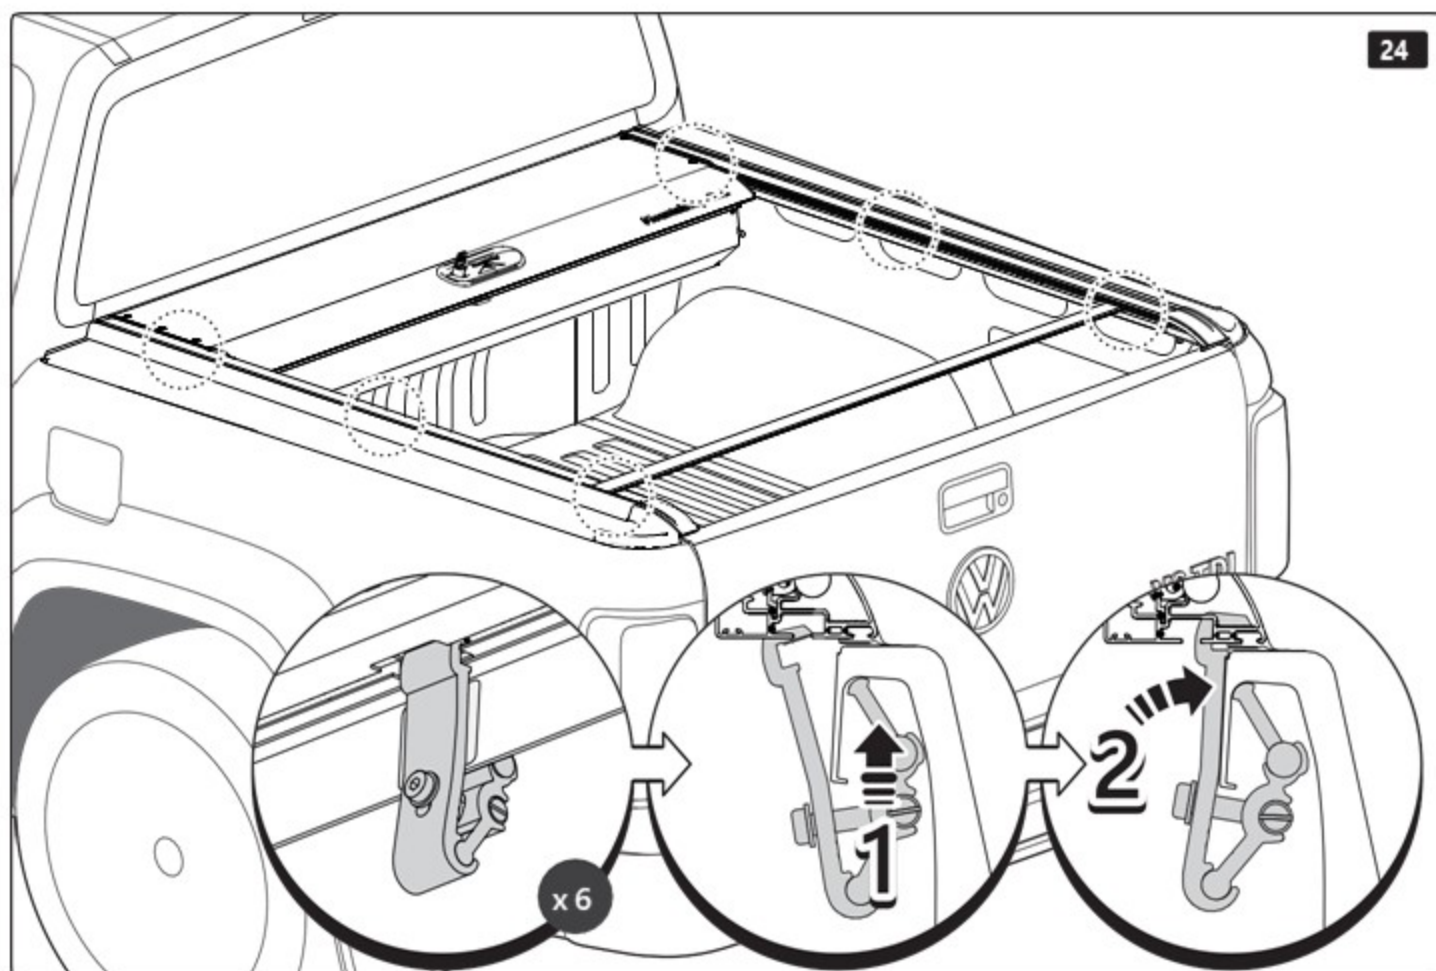

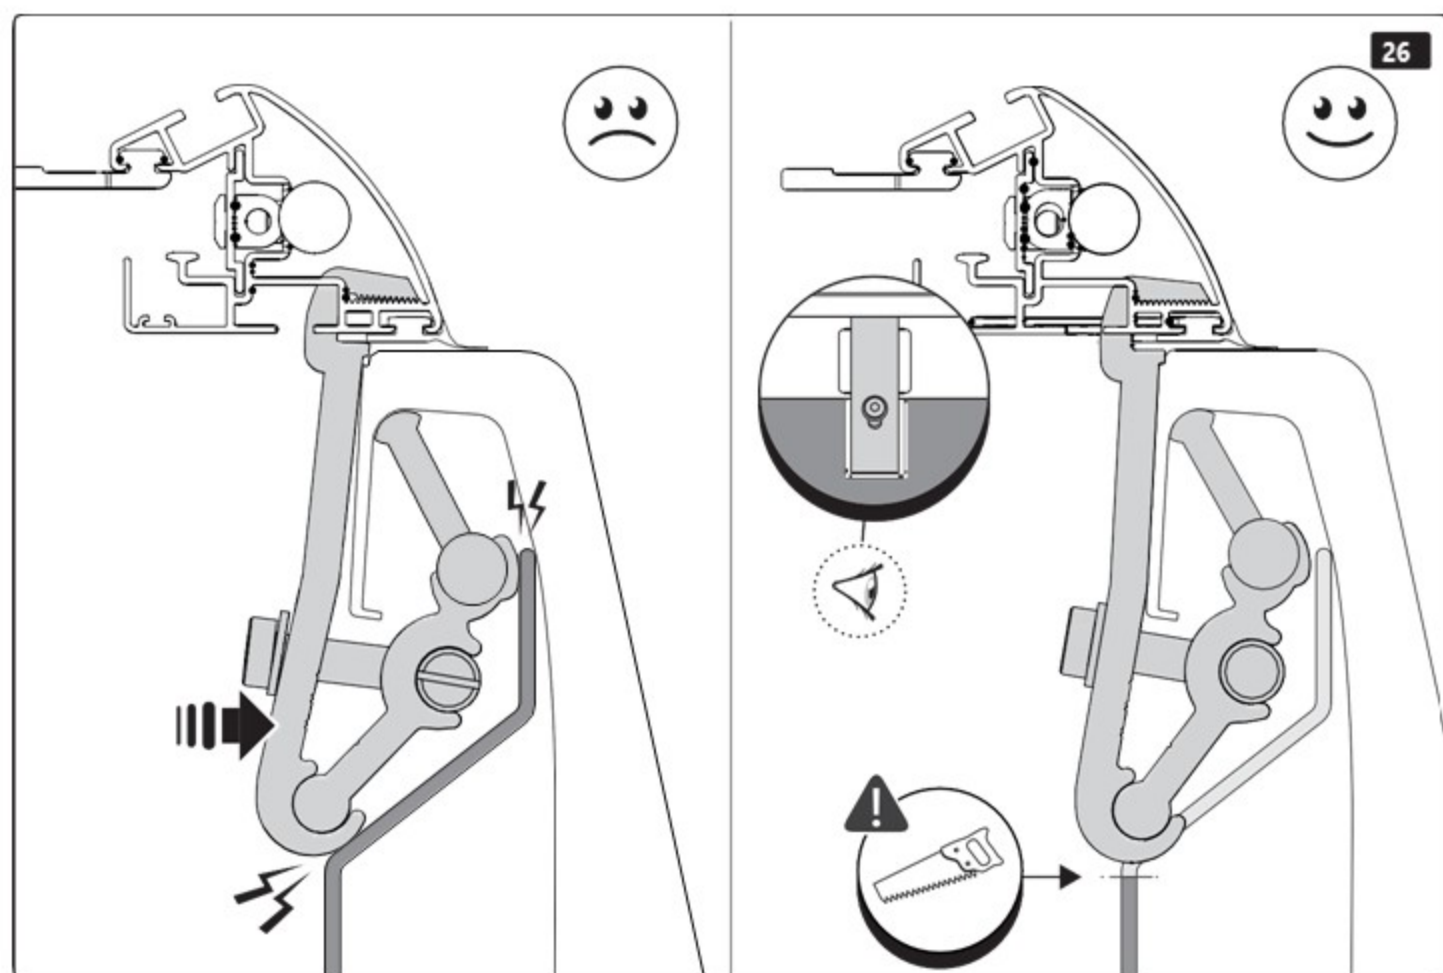
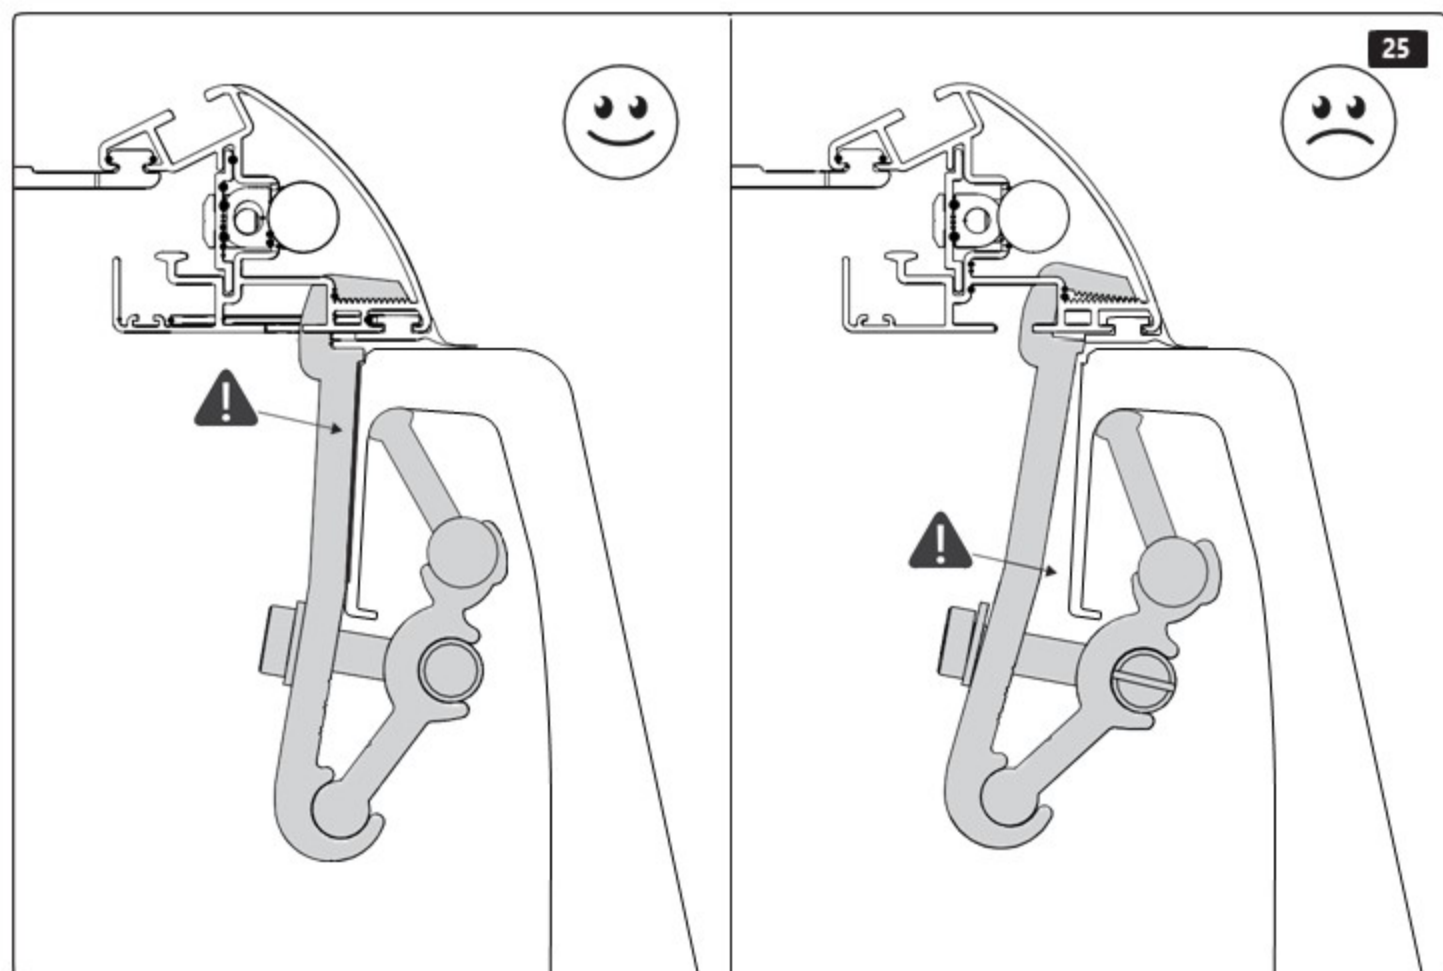


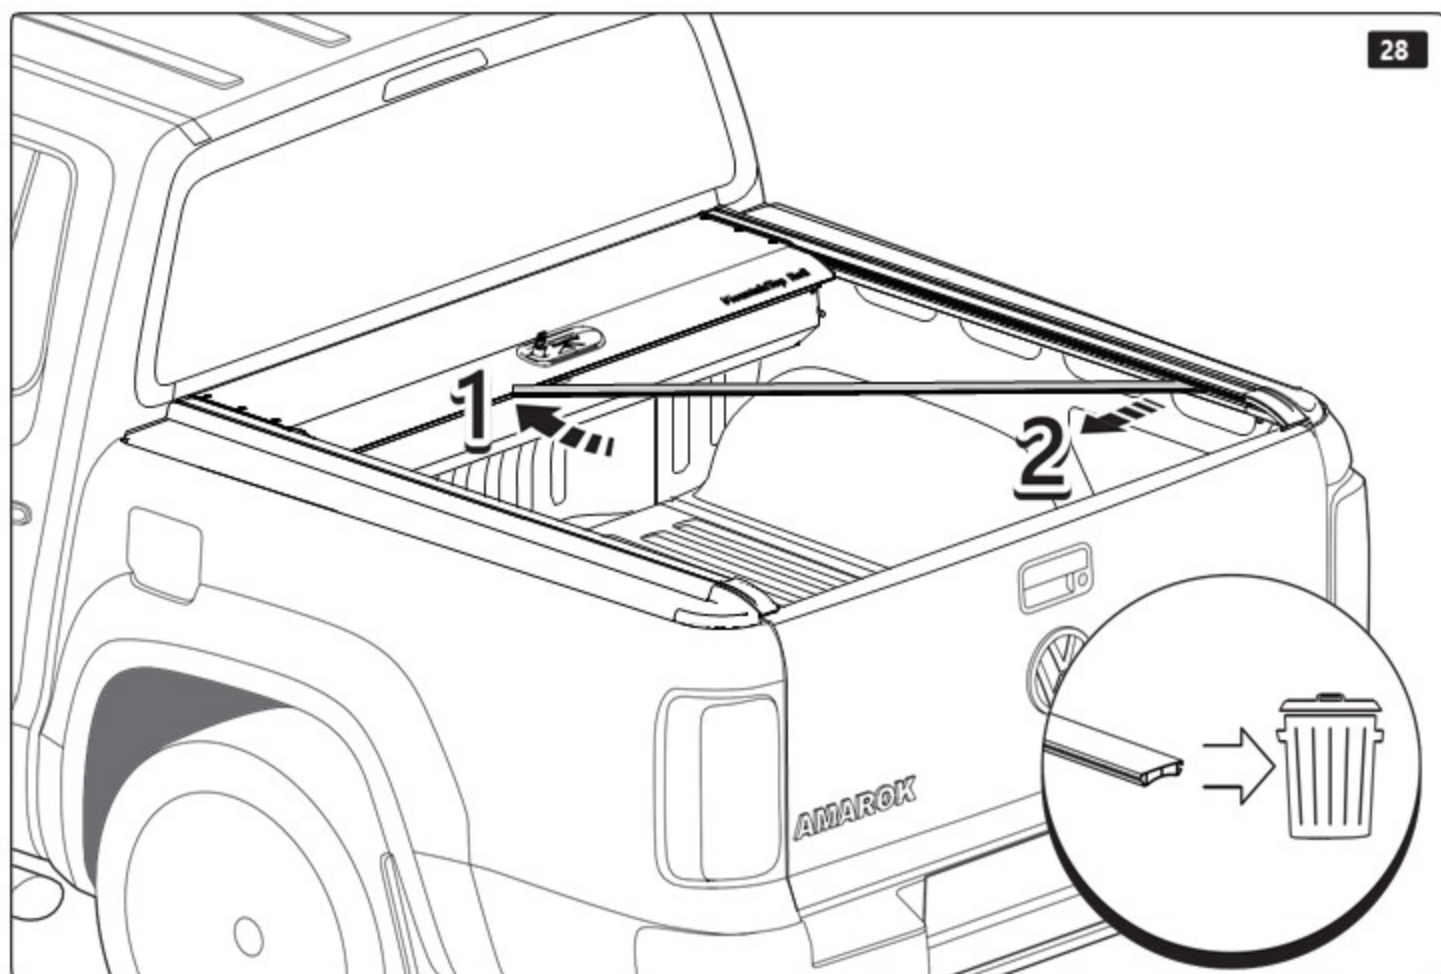
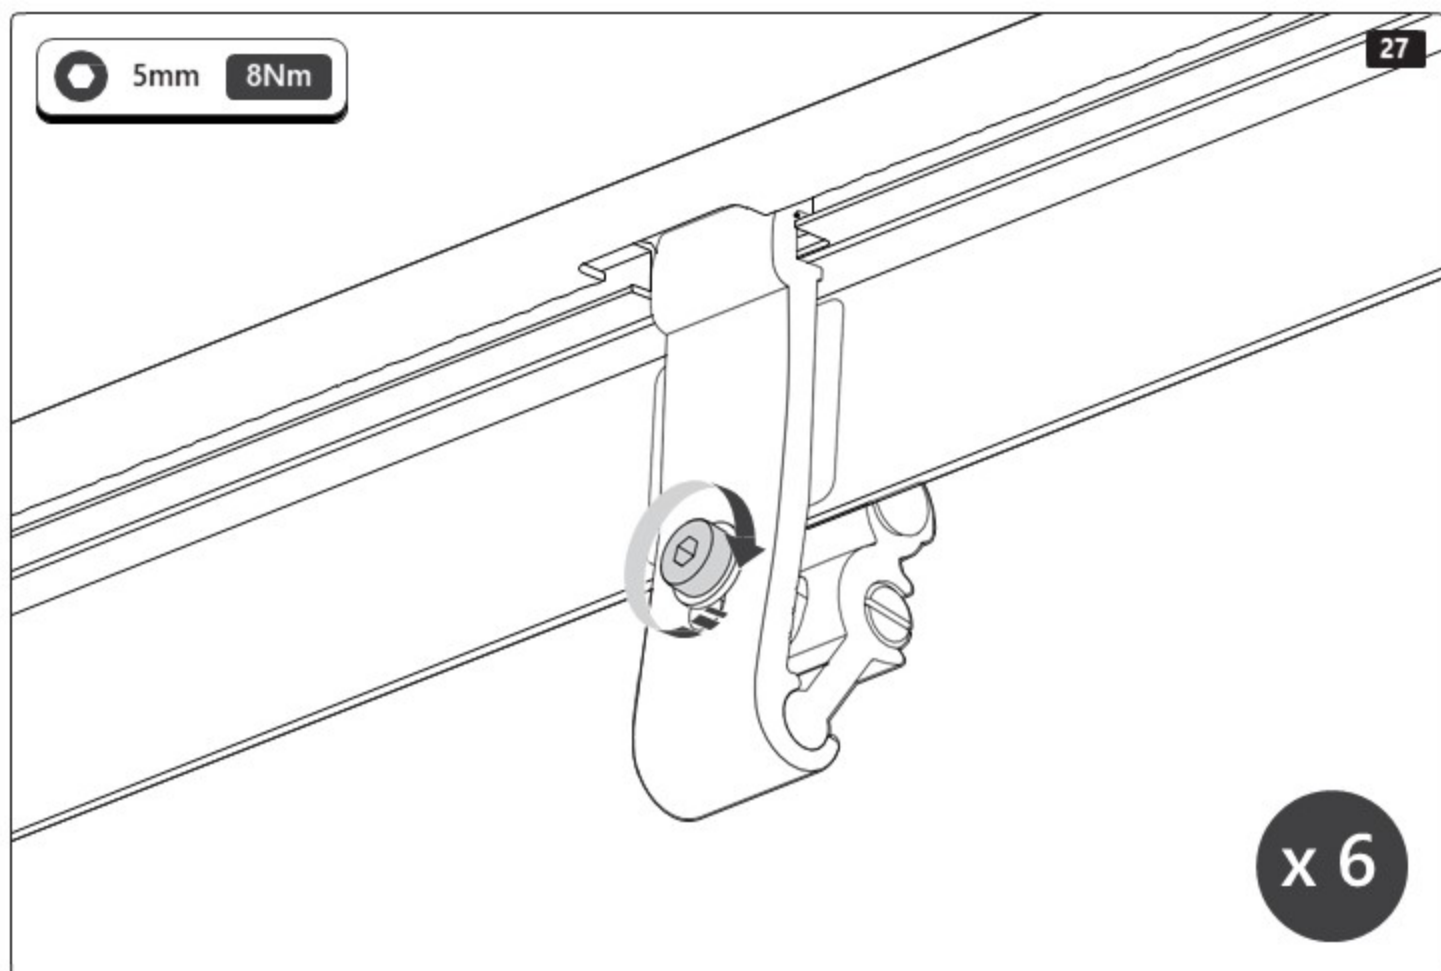


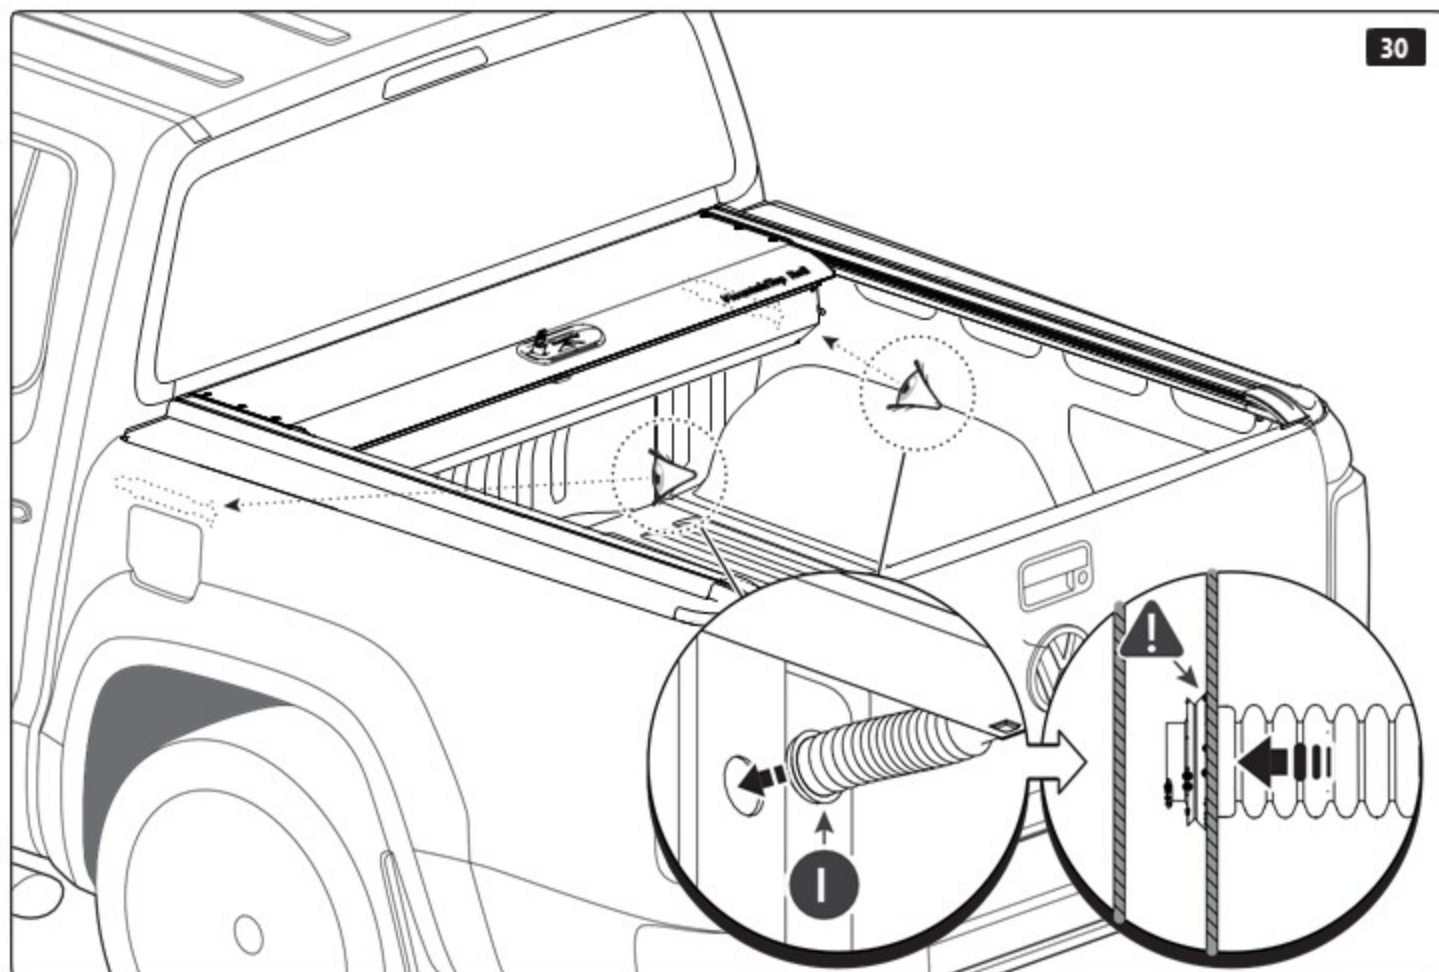
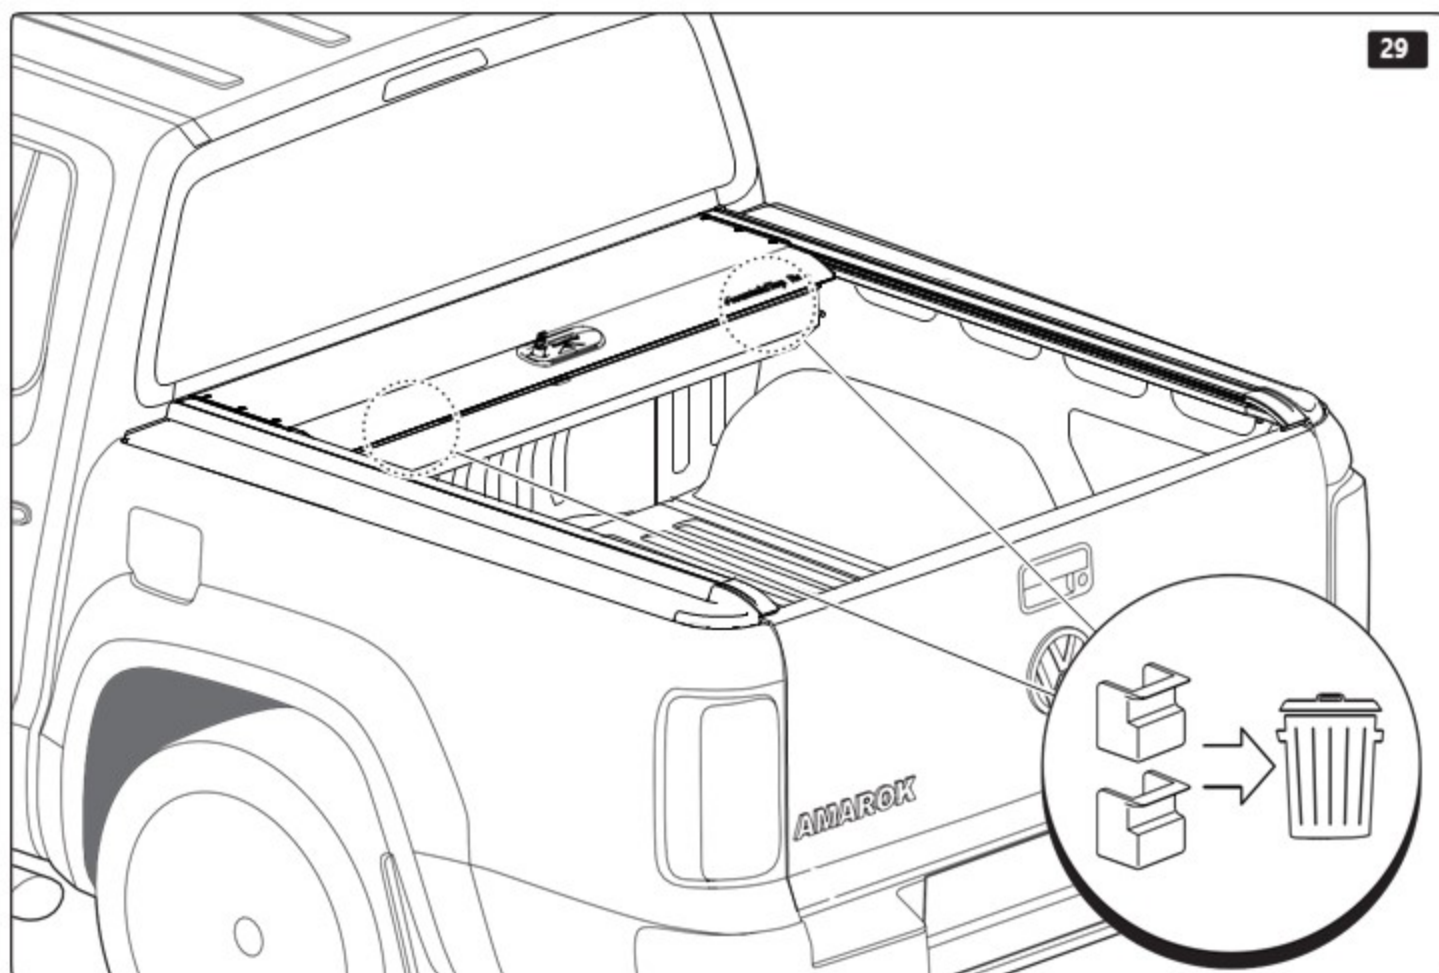


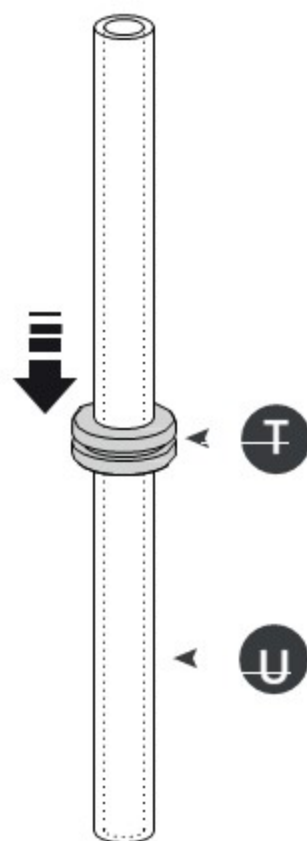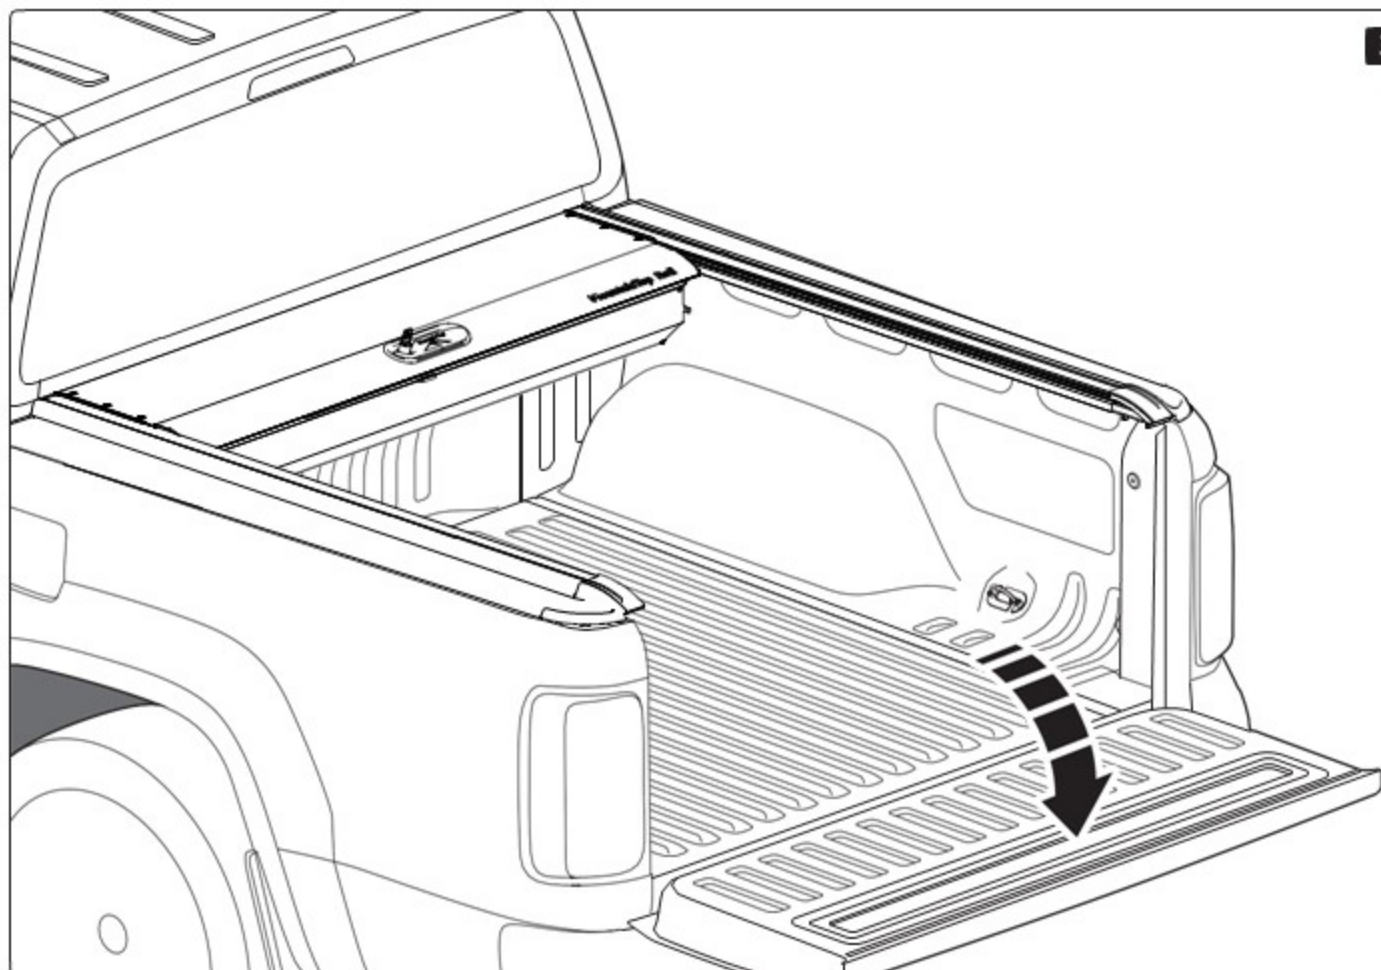


x 2

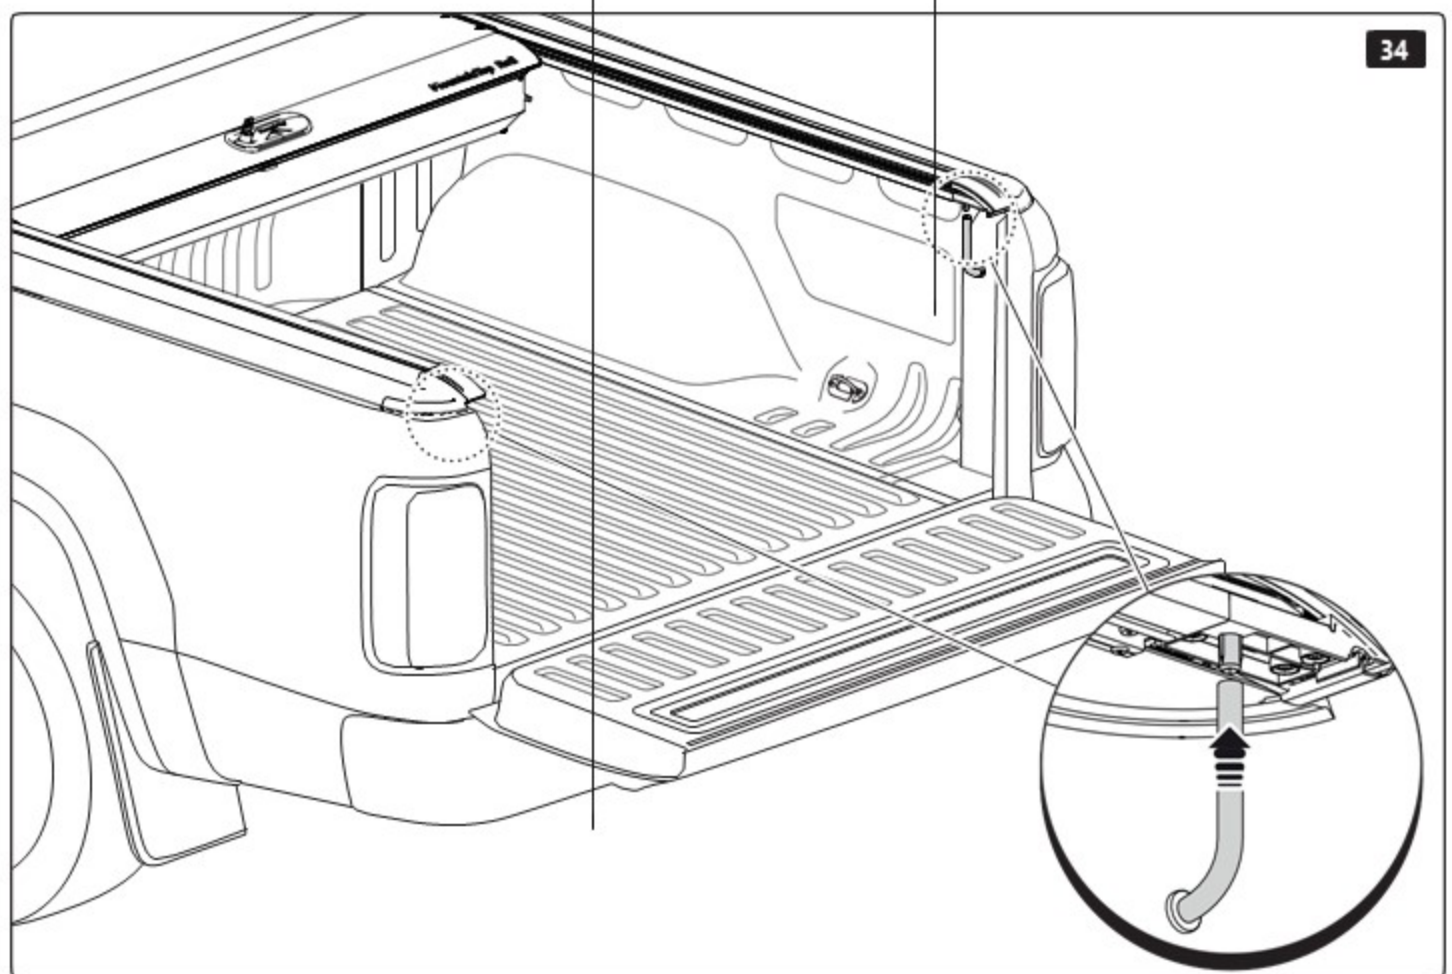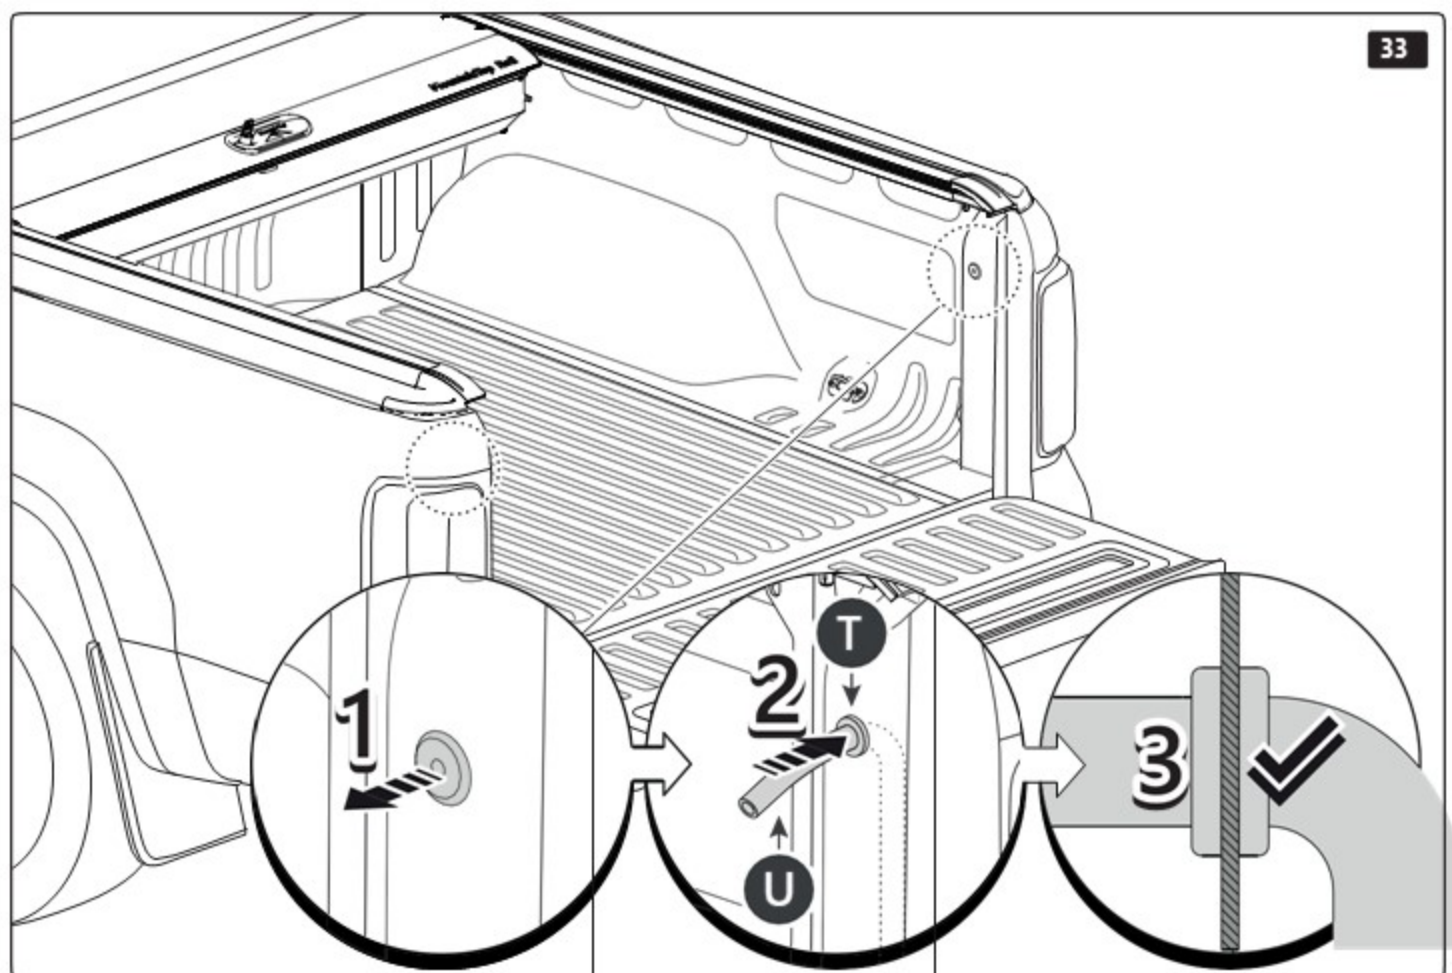

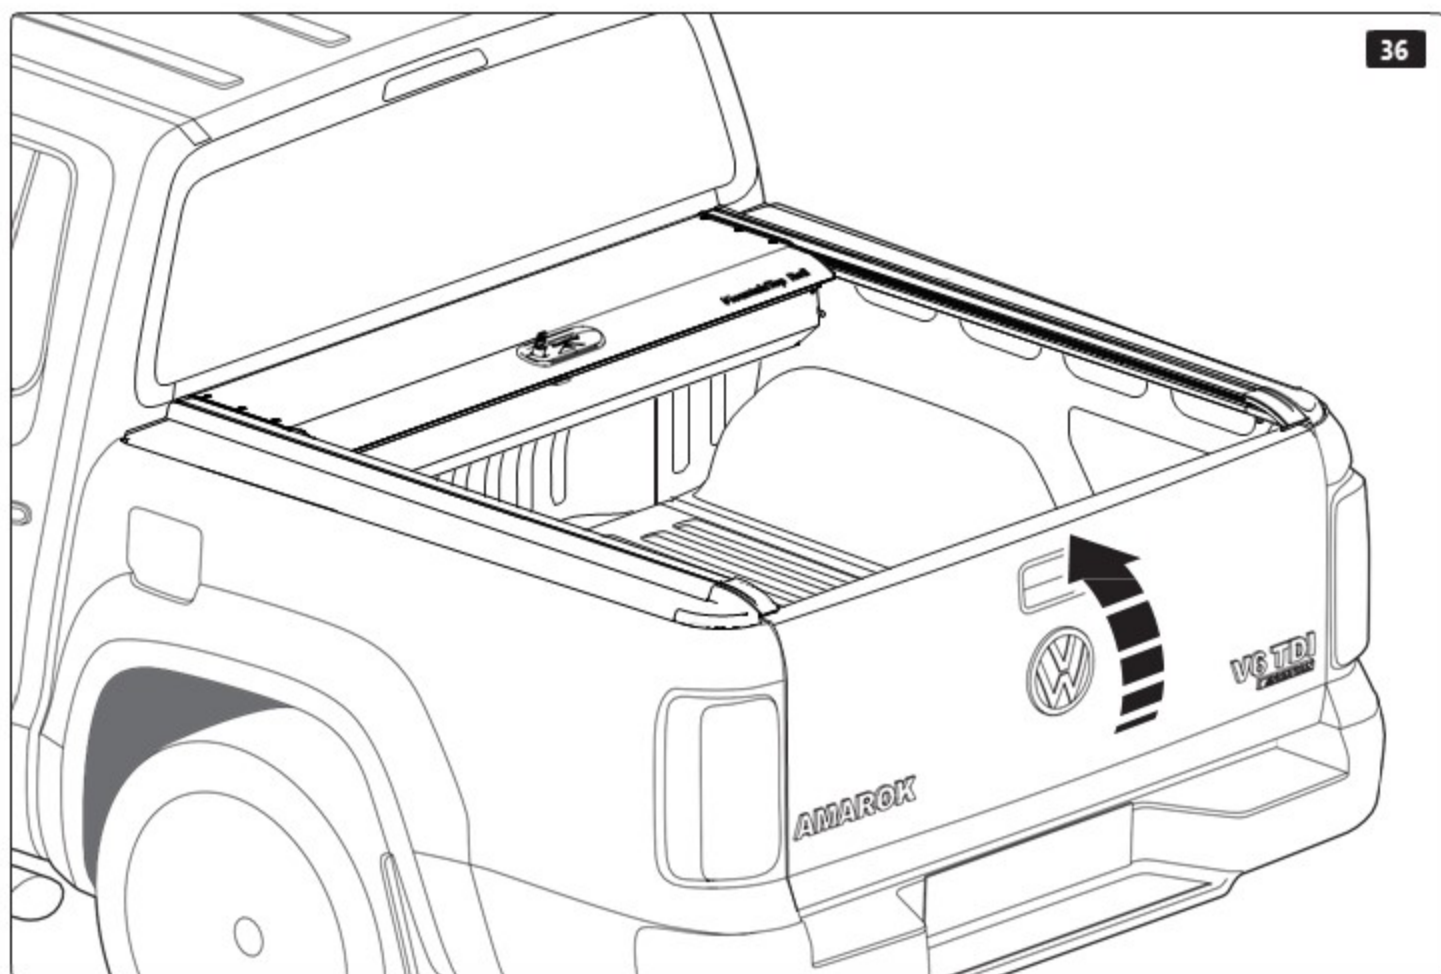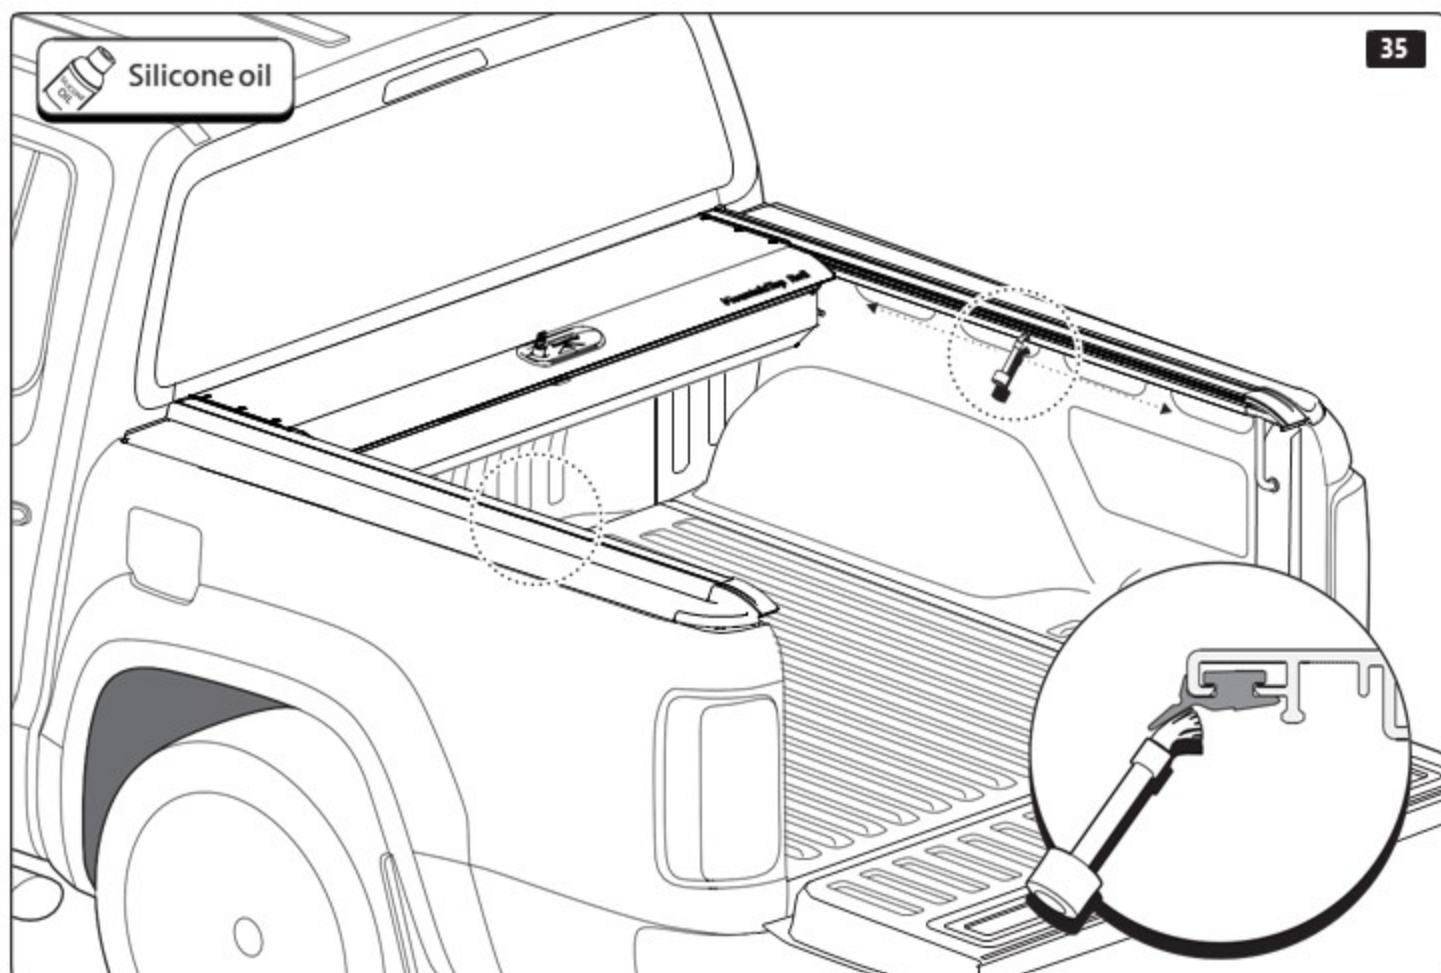


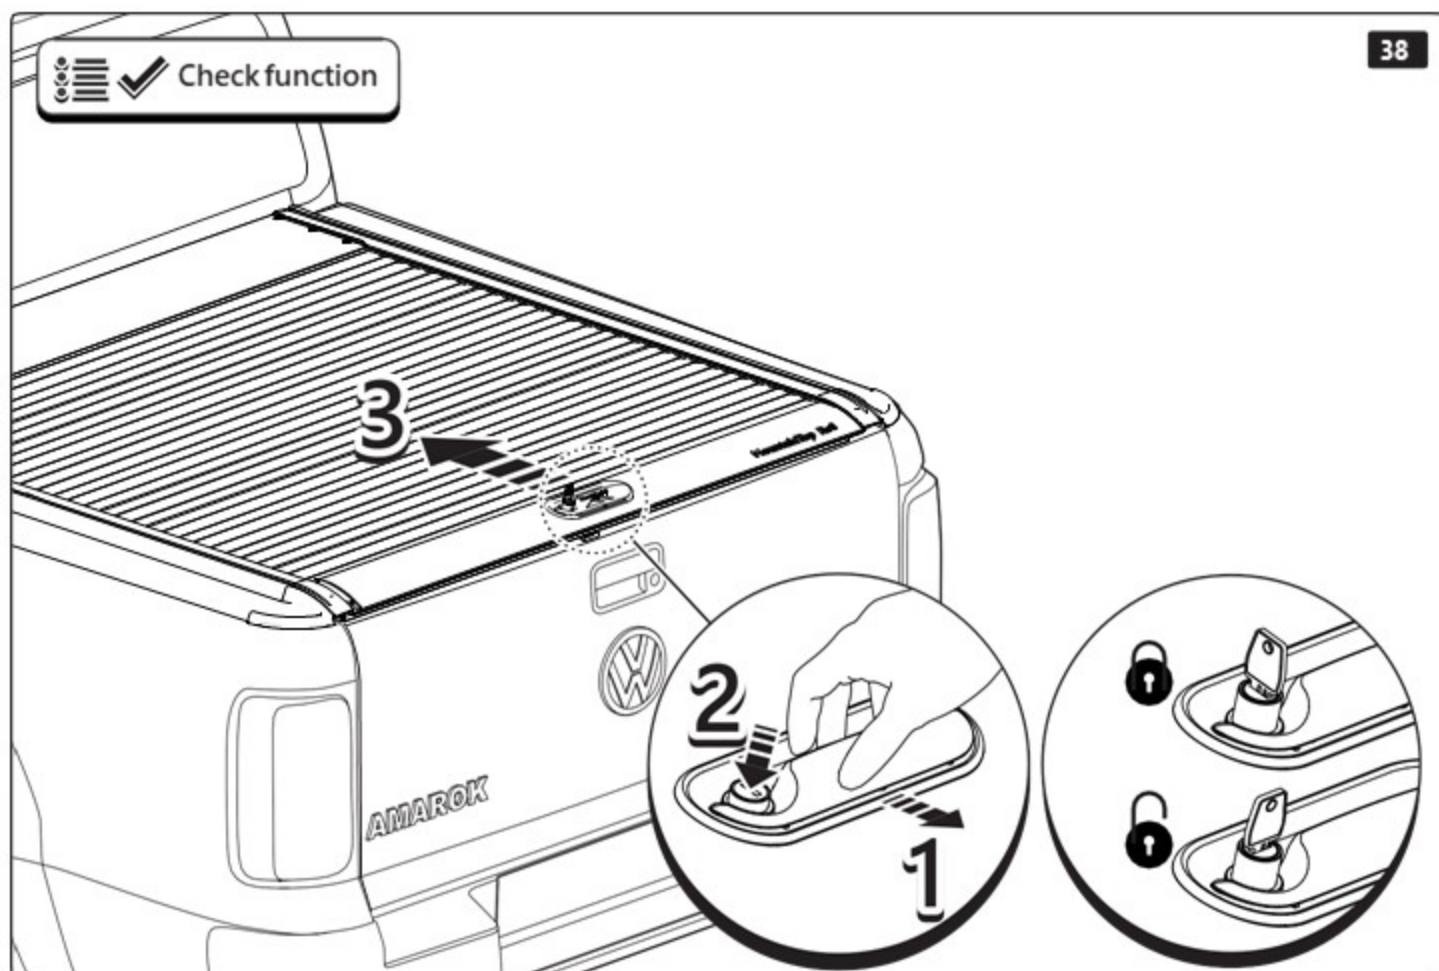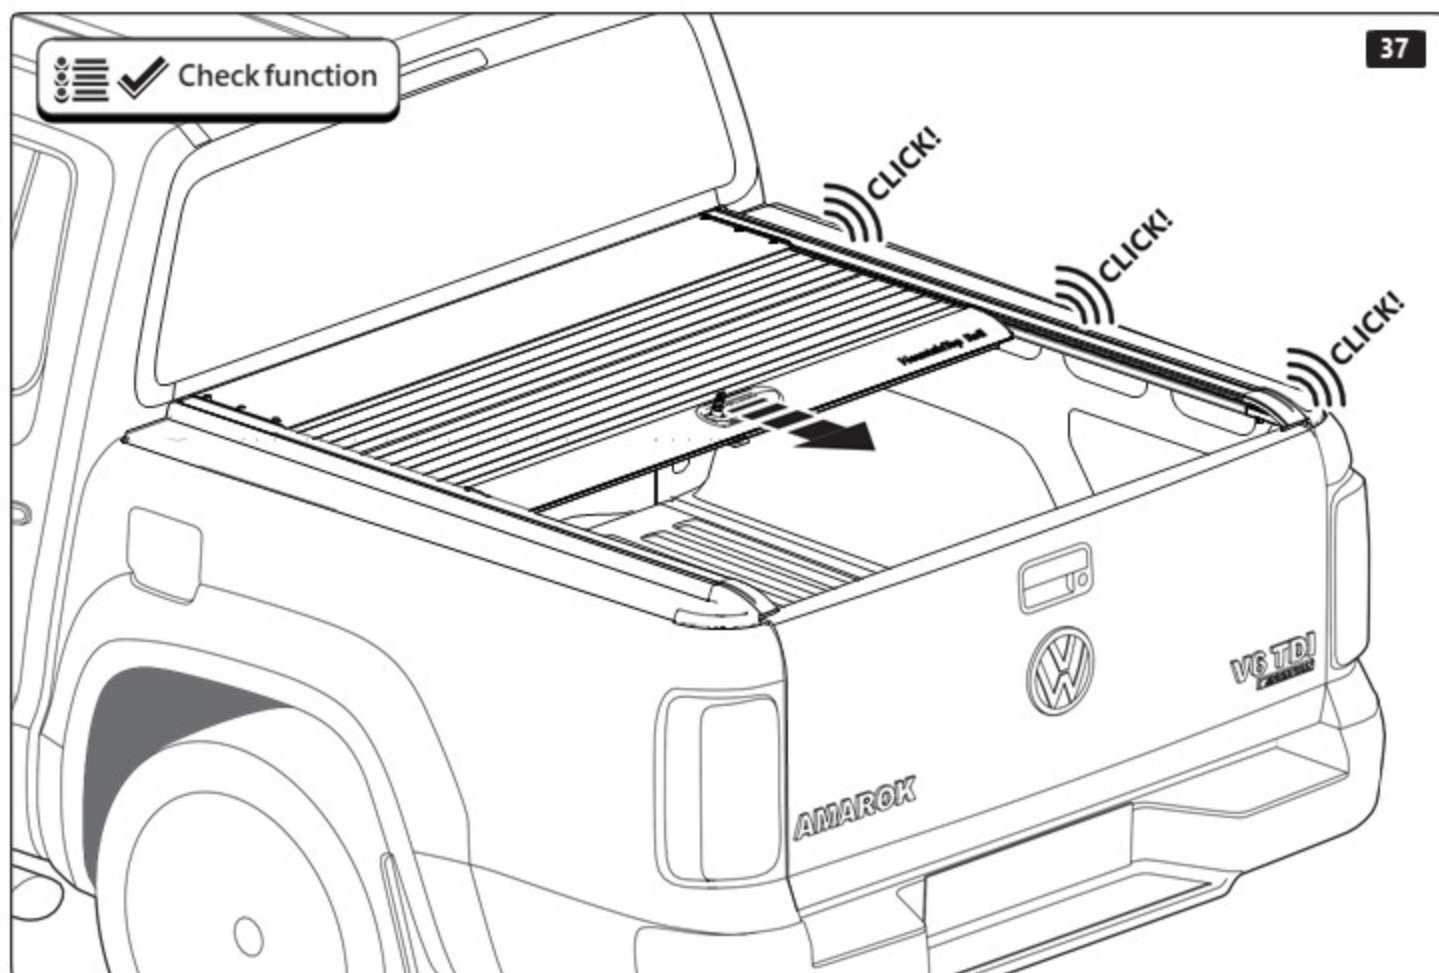

☰ ✓ Check function

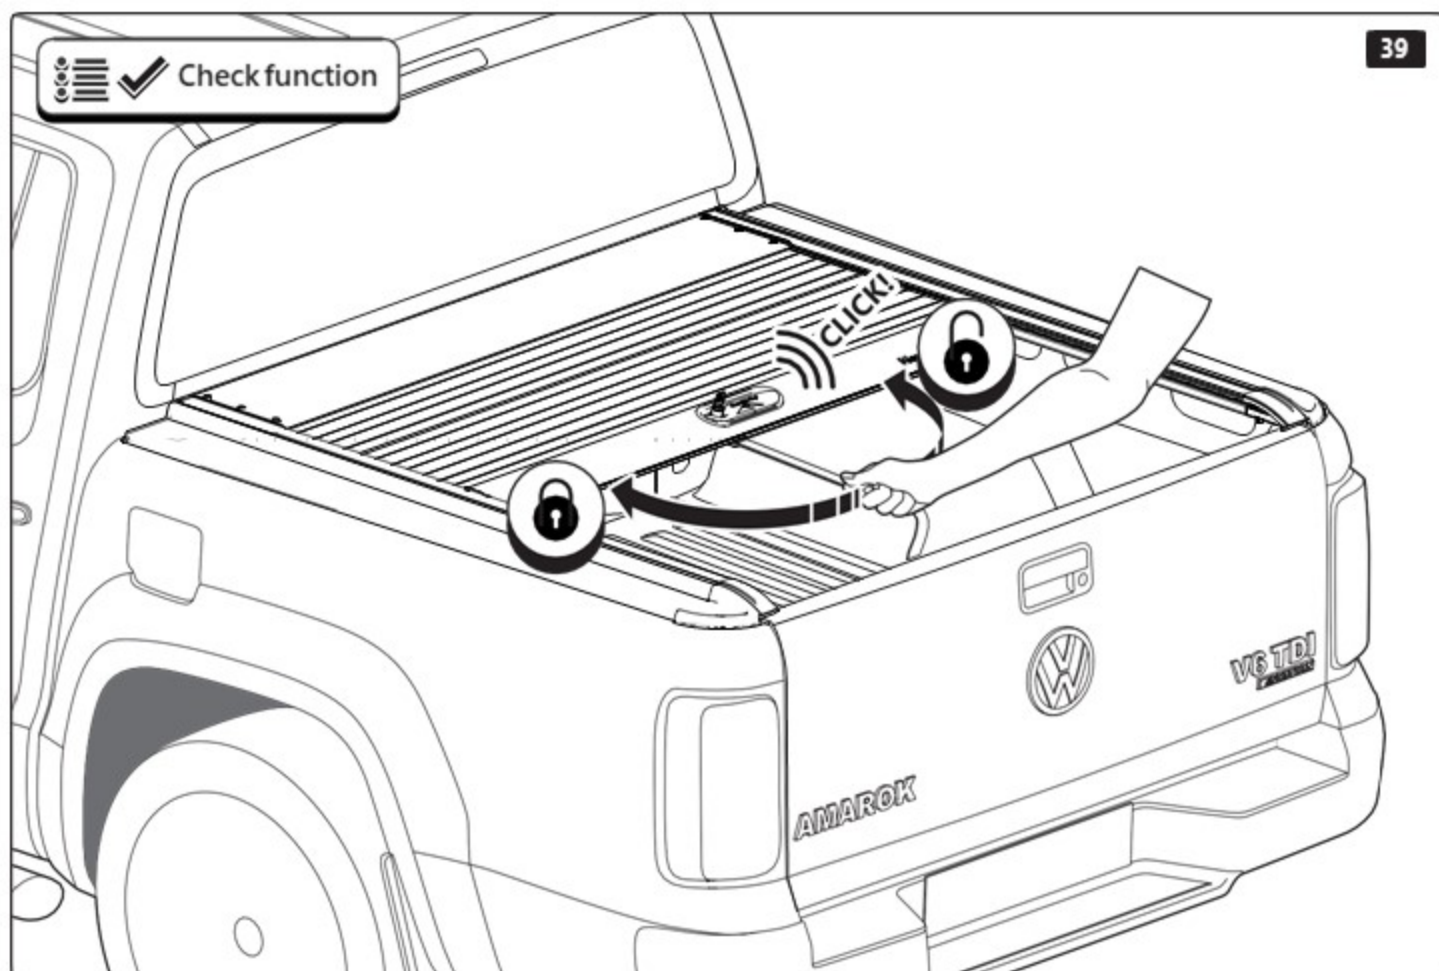

☰ ✓ Check function

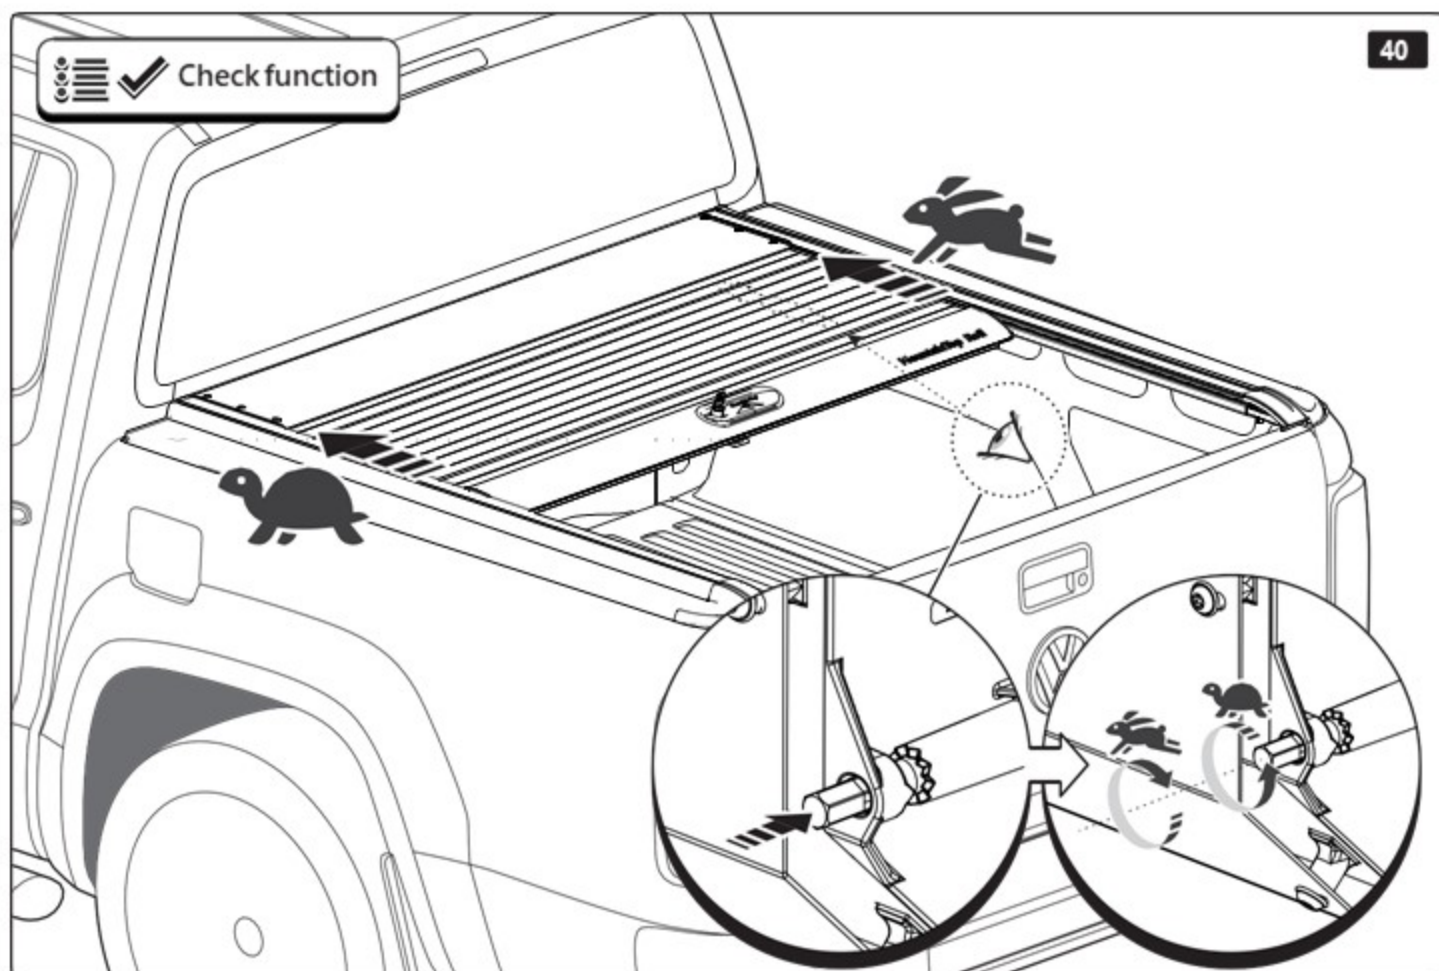

Rollcover

fittinginstruction

Anhang (appendix) 1:

Attention!

All drill holes must be de-burred from both sides. Metal shavings are to be removed/vacuumed up immediately, and it is to be ensured that no shavings fall into the hollow space in the body!

5. Application of paint (according to VW workshop manual "Paint", see "ELSA").
 - 5a. Apply primer.
 - 5b. Allow primer to dry in accordance with the item description. A hot-air dryer can be used, if necessary.
 - 5c. Apply base coat appropriate to the vehicle-specific paint colour.
 - 5d. Allow base coat to dry in accordance with the item description. A hot-air dryer can be used, if necessary.



Customer Service +45 4810 2950 (08:00 - 16:00 CET)
Fax +45 4810 2960
Support info@mountaintop.dk
Website www.mountaintop.dk
Address Pedersholmparken 10, 3600 Frederikssund, Denmark

PART NUMBER(S)	MODEL / YEAR	CAB TYPE(S)	INSTALLATION TIME	WEIGHT
MTR VW80 P01	Volkswagen Amarok / 2016 →	Double Cab	2 hour(s)	31-37 Kg

GB	Installation manual	S	Monteringsanvisning	D	Einbauanleitung
SF	Asennusohje	E	Instrucciones de montaje	CZ	Návod k instalaci
F	Notice de montage	H	Szerelési utasítás	I	Istruzioni de montaggio
PL	Instrukcja montażu	P	Instruções de instalação	GR	Οδηγίες Εγκατάστασης
NL	Installatie-instructies	RUS	Инструкция по установке	DK	Monteringsvejledning
TR	Montaj Talimatı	N	Monteringsveiledning	RO	Instructiuni de instalare